
## **OWNER'S MANUAL**

# CRAFTSMAN.

6.5 Horsepower2500 PSI 2.7 GPMHigh Pressure Washer

Model No: 919.762500

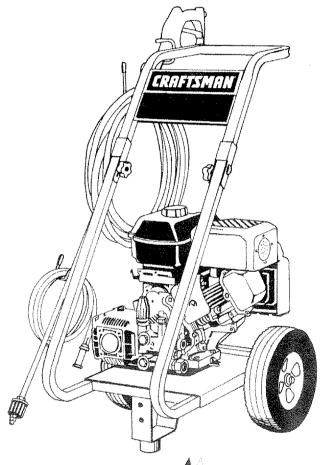

WARNING: Before using this product, read this manual and follow all Safety Rules and Operating Instructions.



- Safety
- Assembly
- Operation
- Maintenance
- Parts List
- Español

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.

### TABLE OF CONTENTS

Warranty 2	Storage15
Safety Guidelines 3-5	Troubleshooting16
Assembly 5-7	Parts17-28
Operation 8-11	EPA Codes29-30
Maintenance 12-14	How to Order PartsBack Cover
Service and Adjustments 15	Fsnañol 32-50

### LIMITED ONE YEAR WARRANTY ON CRAFTSMAN HIGH PRESSURE WASHER

For one year from the date of purchase, when this Craftsman High Pressure Washer is maintained and operated according to the instructions in the owner's manual, Sears will repair, free of charge, any defect in material and workmanship.

If your Craftsman Pressure Washer is used for commercial or rental purposes, this warranty applies only for 90 days from the date of purchase.

### LIMITED ONE YEAR WARRANTY ON CRAFTSMAN ENGINE

Maintenance, replacement or repair of the emission control devices and systems may be performed by any nonroad engine repair establishment or individual. However, to obtain no charge repairs under the terms and provisions of Craftsman warranty statement, any service or emission control part repair or replacement must be performed by an factory authorized dealer.

For one year from the date of purchase, when this Craftsman engine is maintained and operated according to the instructions in the owner's manual, Sears will repair, free of charge, any defect in material and workmanship.

If your Craftsman engine is used for commercial or rental purposes, this warranty applies only for 90 days from the date of purchase. This warranty does not cover: Expendable items such as spark plugs and air filters, which become worn during normal use.

Repairs necessary because of operator abuse or negligence, including damage resulting from no water being supplied to pump or failure to maintain the equipment according to the instructions contained in the owner's manual, are not covered under warranty.

WARRANTY SERVICE IS AVAILABLE BY RETURNING THE HIGH PRESSURE WASHER TO THE NEAREST SEARS SERVICE CENTER/DEPARTMENT THROUGHOUT THE UNITED STATES. This, warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Sears, Roebuck and Co., D/817 WA, Hoffman Estates, IL 60179

### SAFETY GUIDELINES - DEFINITIONS

This manual contains information that is important for you to know and understand. This information relates to protecting **YOUR SAFETY** and **PREVENTING EQUIPMENT PROBLEMS**. To help you recognize this information, we use the symbols below. Please read the manual and pay attention to these sections. **SAVE THESE DEFINITIONS/INSTRUCTIONS.** 

- ▲ WARNING indicates a potentially hazardous situation which, if not avoided, <u>could</u> result in <u>death or serious injury</u>.
- ▲ DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
- ▲ CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

10/2/97

### **IMPORTANT SAFETY INSTRUCTIONS**

### AWARNING

Improper operation or maintenance of this product could result in serious injury and property damage. Read and understand all warnings and operating instructions before using.

HAZARD	WHAT CAN HAPPEN	HOW TO PREVENT IT
A DANGER RISK OF EXPLOSION OR FIRE	Spilled gasoline and its vapors can become ignited from cigarette sparks, electrical arcing, exhaust gases, and hot engine components such as the muffler.	Shut off engine and allow it to cool before adding fuel to the tank.
The state of the s	Heat will expand fuel in the tank which could result in spillage and possible fire explosion.	<ul> <li>Use care in filling tank to avoid spilling fuel. Move pressure washer away from fueling area before starting engine.</li> <li>Keep maximum fuel level ½" below top of tank to allow for expansion.</li> </ul>
	Operating the pressure washer in an explosive environment could result in a fire.	Operate and fuel equipment in well ventilated areas free from obstructions. Equip areas with fire extinguishers suitable for gasoline fires.
	Materials placed against or near the pressure washer can interfere with its proper ventilation features causing overheating and possible ignition of the materials.	Never operate pressure washer in an area containing dry brush or weeds.
	Improperly stored fuel could lead to accidental ignition. Fuel improperly secured could get into the hands of children or other unqualified persons.	Store fuel in container approved for gasoline, in a secure location away from work area.
A DANGER RISK TO BREATHING	Breathing exhaust fumes will cause serious injury or death.	<ul> <li>Operate pressure washer in a well ventilated area. Avoid enclosed areas such as garages, basements ,etc.</li> <li>Never operate unit in a location occupied by humans or animals.</li> </ul>
	Some cleaning fluids contain substances which could cause injury to skin, eyes, or lungs.	Use only cleaning fluids specifically recommended for high pressure washers. Follow manufacturers recommendations.

# **IMPORTANT SAFETY INSTRUCTIONS (cont'd)**

HAZADD WHAT CAN HADDEN HOW TO DDEVENT IT									
HAZARD	WHAT CAN HAPPEN	HOW TO PREVENT IT							
A WARNING RISK OF UNSAFE OPERATION	<ul> <li>Unsafe operation of your pressure washer could lead to serious injury or death to you or others.</li> <li>The spray gun/wand is a powerful cleaning tool that could look like a toy to a child.</li> <li>Reactive force of spray will cause gun/wand to move, and could cause the operator to slip or fall, or misdirect the spray. Improper control of gun/wand can result in injuries to self and others.</li> </ul>	<ul> <li>Become familiar with the operation and controls of the pressure washer.</li> <li>Keep children away from the pressure washer at all times.</li> <li>Never defeat the safety features of this product.</li> <li>Do not operate machine with missing, broken, or unauthorized parts.</li> <li>Never leave wand unattended while unit is running.</li> <li>Keep work area free of obstacles.</li> <li>Stand on a stable surface and grip gun/wand firmly. Expect the gun to kick when triggered.</li> </ul>							
A WARNING RISK OF INJURY FROM SPRAY	High velocity fluid spray can cause objects to break, propelling particles at high speed.	Always wear ANSI approved Z87 safety glasses. Wear protective clothing to protect against accidental spraying.							
> SPRAY	Light or unsecured objects can become hazardous projectiles.	<ul> <li>Never point wand at, or spray people or animals.</li> <li>Always secure trigger lock when wand is not in service to prevent accidental operation.</li> <li>Never permanently secure trigger in pull back (open) position.</li> </ul>							
RISK OF ELECTRICAL SHOCK	Spray directed at electrical outlets or switches, or objects connected to an electrical circuit, could result in a fatal electrical shock.	Unplug any electrically operated product before attempting to clean it. Direct spray away from electric outlets and switches.							
A WARNING RISK OF FLUID INJECTION	Your washer operates at fluid pressures and velocities high enough to penetrate human and animal flesh, which could result in amputation or other serious injury. Leaks caused by loose fittings or worn or damaged hoses can result in injection injuries. DO NOT TREAT FLUID INJECTION AS A SIMPLE CUT! See a physician immediately!	<ul> <li>Never place hands in front of nozzle.</li> <li>Direct spray away from self and others.</li> <li>Make sure hose and fittings are tightened and in good condition. Never hold onto the hose or fittings during operation.</li> <li>Do not allow hose to contact muffler.</li> <li>Never attach or remove wand or hose fittings while system is pressurized.</li> </ul>							
	<ul> <li>Relieve system pressure before attempting maintenance or disassem- bly of equipment.</li> </ul>	<ul> <li>Use only hose and high pressure accessories rated for 2500 PSI service.</li> <li>To relieve system pressure, shut off engine, turn off water supply, and pull gun trigger until water stops flowing.</li> </ul>							
WARNING RISK OF CHEMICAL BURN	<ul> <li>Use of acids, toxic or corrosive chemicals, poisons, insecticides, or any kind of flammable solvent with this product could result in serious injury or death.</li> </ul>	<ul> <li>Do not use acids, gasoline, kerosene, or any other flammable materials in this product. Use only household detergents, cleaners and degreasers recommended for use in pressure washers.</li> <li>Wear protective clothing to protect eyes and skin from contact with</li> </ul>							
		sprayed materials.							

### **IMPORTANT SAFETY INSTRUCTIONS (cont'd)**

#### HAZARD WHAT CAN HAPPEN HOW TO PREVENT IT · Contact with hot surfaces, such as • During operation, touch only the control /INMARNING engines exhaust components, could surfaces of the pressure washer. Keep RISK OF HOT SURFACES result in serious burn. children away from the pressure washer at all times. They may not be able to recognize the hazards of this product. International Safety Alert - Read

Symbols



Owner's Manual











### IMPORTANT:

The powerful spray from your pressure washer is capable of causing damage to fragile surfaces such as: wood, glass, automobile paint, auto stripping and trim, and delicate objects such as flowers and shrubs. Before spraying, check the item to be cleaned to assure yourself that it is robust enough to resist damage from the force of the spray. Avoid the use of the concentrated spray stream except for very strong surfaces like concrete and steel.

Operating unit with water supply shut off without flow of water will result in equipment damage. You should never run this pressure washer for more than 2 minutes without pulling the trigger to allow cool water to enter the pump and the heated (recirculated) water to exit. Running the pressure washer with water supply shut off will void your warranty.

### **Carton Contents**

- · Main Unit pressure washer with wheels
- Handle
- High Pressure Hose
- · Chemical Pickup Hose and Filter
- Gun
- Wand



Main Unit pressure washer with wheels



Handle



High Pressure Hose



Chemical Pickup Hose and Filter



Gun and Wand

#### Baq Containing

- Video Cassette
- Owners' Manual
- Nozzle Cleaning Kit and Replacement O-Rings
- Handle Mounting Hardware
- **Engine Oil**
- Rubber Isolator and Mounting Hardware



Video Cassette Owners' Manual



Nozzle Cleaning Kit



Handle Mounting Hardware



Engine Oil



Rubber Isolator and Mounting Hardware





Replacement O-Rings

### **Tools Required for Assembly**

Adjustable wrench 1/2" Socket

### **Remove Pressure Washer from Carton**


- Open box from the top. Locate and remove from box, the parts box, which includes gun, handle, wand,oil, knobs and J bolts. Next remove the parts bag and the handle.
- · Cut carton along dotted lines.
- · Remove all carton inserts.
- · Roll unit through opening in carton.

**Note:** The pressure hose and chemical hose are located at the bottom of the box.


### Preparing the Pressure Washer for First Use

**Note:** Included with your pressure washer is a video tape on how to prepare your unit for operation. It is recommended you view this tape before performing the next steps.


- 1. Insert handle onto frame.
  - · Slide J bolts into frame.
  - Tighten knobs turning in clockwise direction.

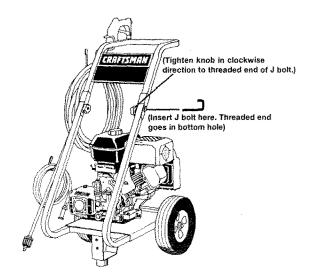


Remove wood plank from the frame of the unit. An adjustable wrench is required. Discard bolt and board.

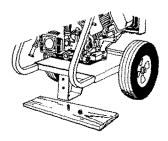

3. • Mount the rubber isolator to the frame. To mount isolator place threaded end of bolt through the washer. Next with washer on bolt place threaded end of bolt through larger hole in bottom of the rubber isolator. Place threaded portion of isolator through the front hole location where the wood plank was mounted on the pressure washer. Next place lockwasher over threaded portion of bolt that has been placed through the mounting hole in the pressure washer and use nut to tighten isolator to the frame. Tighten nut with an adjustable wrench. All isolator parts are supplied in parts bag.

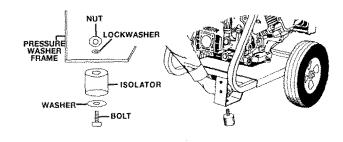


 Connect wand with nozzle assembly to gun. To tighten, turn knob in clockwise direction. Hand tighten.




5. • Cut tie wrap off of high pressure hose. Unwind high pressure hose to attach the threaded end to the gun.



6. • Connect chemical hose to the chemical injector hose barb on pump.

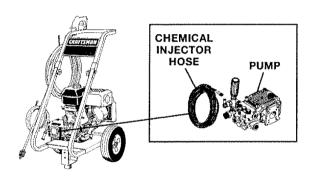

7. • Connect high pressure hose to the quick connect outlet on pressure washer.

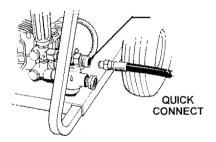

**NOTE:** Always keep hose away from engine muffler.

8. Your units pump is shipped with a temporary plug that must be replaced with a breather cap. This plug is located over the pump's oil port. Unscrew and remove this plug. Remove the breather cap from the bag attached to the plug and install it in the pump's oil port.



**CAUTION:** Failure to replace the plug will result in serious pump damage.

9. • Place assembled gun and wand on pressure washer's handle bracket as shown.



### Checklist

Before going any further please review the following:

- Be sure you have completed assembly instruction.
- Double check all fittings to be sure they are tight.

**IMPORTANT:** Before any attempt to start your pressure washer be sure to check engine oil (See Operation under Engine Oil, page 9.)

### OPERATION

### Know Your High Pressure Washer

Read this Owner's Manual and Safety Rules before operation of your High Pressure Washer Compare this illustration with our pressure washer to familiarize yourself with the location of various controls and adjustments. Save this manual for future reference.

PUMP- Develops high pressure.

ENGINE OIL FILL- Place where engine oil is poured.

**PRESSURE REGULATOR**- Allows you to adjust the pressure of the outlet stream.

**ENGINE RUN/STOP SWITCH**- Sets engine in starting mode for recoil starter — *Stops* running engine.

**RECOIL STARTER**- Used for starting the engine manually.

**SPRAY GUN ASSEMBLY**- Controls the application of water onto cleaning surface with trigger device.


**PUMP OIL FILL-** Port where pump oil is poured and breather cap is located.

**GAS TANK/CAP-** Cap is removed and unleaded gasoline is poured.

CHEMICAL INJECTION TUBE AND FILTER- Mixes water and detergent in outlet water flow.

**HIGH PRESSURE OUTLET-** Connection for high pressure hose.

CHOKE- Lever used for starting unit.

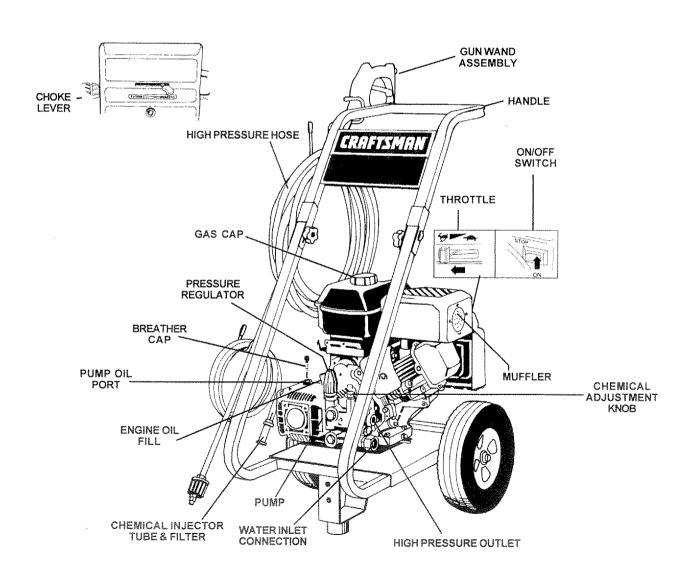


▲ Warning: Read Owner's Manual. Do not attempt to operate equipment until you have read Owners Manual for Safety, Operation, and Maintenance Instructions.

**Note:** Included with your unit is a video cassette that demonstrates how to operate your pressure washer. If you have a video cassette recorder you should view the video before operation.

▲ Warning: Never adjust spray pattern when spraying. Never put hands in front of spray nozzle to adjust spray pattern because you could be injured.


### **Stopping Your Pressure Washer**

- ▲ CAUTION: Do not run pump without the water supply connected and turned on. Failure to do so will result in pump damage.
- To turn pressure washer off place the on/stop switch to the stop position.



 Simply shutting OFF engine will not release pressure in the system. Squeeze the trigger on the spray gun for about 3 seconds to relieve pressure. Spray stream will decrease in length.

**IMPORTANT:** This unit is equipped with a thermal relief valve. If unit is allowed to run for several minutes without pressing the trigger on the spray gun, several drops of water may be released through this valve to cool the unit. The heated water will be purged from the bottom of the pump.



### BEFORE STARTING THE ENGINE

To operate the engine you will need to do the following.

- ▲ CAUTION: Always check engine oil level before every start. Running engine low of oil or out of oil could result in serious damage.
- ▲ CAUTION: Always check pump oil level before every start. Running pump low on oil could result in pump damage.


### Adding Pump Oil

Before running the high pressure washer, check the pump oil level by viewing the sight glass on the side of the pump. When properly filled, the oil will be at the half way point marked by the two triangles. Your pressure washer pump is shipped with oil. Add oil only if oil level is lower than the half way point on the sight glass. **Do not overfill**. Use 30 weight non-detergent oil if necessary.


▲ CAUTION: Do Not use engine oil that has been shipped with your unit in your pump. Engine oil is detergent and your pump uses a non-detergent oil. Detergent oil can cause damage to your pump.

### **Engine Oil**

Your unit has been shipped **without** oil in the engine. A bottle of SAE 30 weight oil is included in the carton. Remove oil plug located on the side of engine. Using a funnel, fill engine crankcase up to the last thread in the oil port. Pour slowly. Oil reading will be inaccurate on unlevel ground.

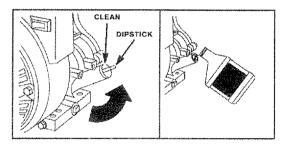

**NOTE:** When adding oil to the engine crankcase, use a high quality detergent oil classified "For Service SF, SG, SH rated SAE 30 weight. Use no special additives. Select the oil's viscosity grade according to you expected operating temperatures.



Air cooled engines run hotter than automotive engines. The use of multi-viscosity oil such as (10W-30, etc.) in ambient temperatures above 40°F (4°C) will result in higher than normal oil consumption. If multi-viscosity oil is used, check the oil level more frequently to prevent any posssible engine damage due to lack or lubrication.

Use of SAE30 oil below 40°F (4°C) will result in hard starting and possible engine damage due to inadequate lubrication.

### Gasoline

Your pressure washer engine is 4 cycle. Use unleaded fuel only.

- ▲ CAUTION: Do not overfill the fuel tank. Always allow room for fuel expansion.
- ▲ WARNING: Never fill fuel tank indoors. Never fill fuel tank when engine is running or hot. Do not smoke or have open flame when filling fuel tank.


Use clean, fresh, regular unleaded gasoline with a minimum of 85 octane. Do not mix oil with gasoline. If unleaded fuel is not available, leaded fuel may be used.

IMPORTANT: It is important to prevent gum deposits from forming in essential fuel system parts such as the carburetor, fuel filter hose or tank during storage. Also, experience indicates that alcohol-blended fuels (called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage. To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer. Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.

**NOTE:** Never start pressure washer with out water source turned on and connected to pressure washer.

### To Start Your Pressure Washer


Make sure fuel shutoff valve is turned to the open position.



- · Remove gas cap
- Add unleaded gasoline, slowly, to fuel tank.
- Do not overfill.




 Connect garden hose to the water inlet on the pressure washer. Tighten by turning water inlet counterclockwise.



- Connect high pressure hose to discharge on pump.
- Connect the garden hose to the water spout and turn water supply on.




- Squeeze trigger on pressure washer wand to relieve air pressure caused by turning on the water. Water will spew out of the gun in a thin stream. This will make it easier to start the engine.
- Engage the safety latch on the spray gun. This locks the trigger in place and keeps you from accidentally spraying a high pressure stream.



• On the engine there is a choke/run lever. Place lever to the choke position.



 On the engine there is a throttle control lever. Place throttle to the rabbit position. Always start engine with throttle in the rabbit position. Place on/stop switch to the "on" postion.



- Make sure fuel shut off valve is to the open position.
- Grasp the starter grip and pull slowly until resistance is felt, then pull firmly to start engine.


- When engine starts, gradually move choke lever to RUN position.
- If engine does not start after 5 pulls, place choke back to run position.
- For hot engine starts make sure choke/run lever is in the run position. Make sure fuel shut off valve is open and throttle is in the Rabitt position.

**NOTE:** If any leaks are present shut unit down and tighten fittings.

#### How To Use Your Pressure Washer

On the end of your spray gun is a nozzle that you can twist from side to side. With the adjustable nozzle you can adjust the nozzle to either high pressure or low pressure.


 Turn the nozzle in a counter clockwise direction to achieve low pressure. Turn nozzle clockwise for high pressure.



 For most effective cleaning, keep spray nozzle between 8 and 24 inches of cleaning surface.

**IMPORTANT:** If you get spray nozzle too close, especially on high pressure, you may damage the cleaning surface.

The pressure control knob is located on the pump.
 You can increase the pressure by turning the knob clockwise or decrease the pressure by turning the knob counterclockwise.

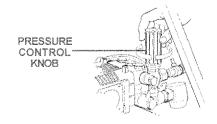

**NOTE:** The maximum pressure for the unit is set at its maximum setting at the factory. Do not attempt to adjust the pressure higher than this factory setting.

### Using Soaps/Chemicals

**IMPORTANT:** Use soaps and chemicals that are designed specifically for use with pressure washers. To apply soap/chemicals follow these steps:

- Prepare the soap/chemical as required by your job.
- Insert soap/chemical line into your container (soap/ chemicals not included).




**NOTE:** The first step involves applying an appropriate soap/chemical solution to penetrate and loosen grime. The soap/chemical is applied at low pressure to avoid splashing, over spray and waste. Leave the solution on surface for 3 to 5 minutes to allow solution to work.

**NOTE:** The second step involves cleaning the surface you have prepared with the pressure washer and then rinsing it clean.

- Turn the adjustable nozzle counter clockwise to low pressure mode. Soap/chemicals cannot be applied with nozzle in high pressure position.
- · Review the use of the adjustable nozzle.
- Connect garden hose to water inlet (see "To Start Your Pressure Washer"), check that high pressure hose is connected to spray gun and pump (see Assembly), and start engine.
- Apply soap/chemicals to dry surface. starting from the bottom and working up.
- Allow the soap/chemicals to soak in between 3-5 minutes before washing and rinsing.
- For cleaning, start at lower portion of area to be washed and work upward, using long even overlapping strokes.

Your pressure washer is equipped with a chemical injector adjustment knob. With the knob fully opened you will get maximum chemical draw. With knob fully closed you will get *no* chemical draw. Turn knob in counter clockwise direction to achieve more chemical draw and clockwise for less chemical draw.



 After using the pressure washer, it is recommended the pump, chemical injector and chemical line be flushed with clear water. To do so, simply place chemical injector hose in water and siphon for 1 to 2 minutes.

### **MAINTENANCE**

SHA SRIT PRINTING TO A COL		Every 25	Every 50	Every 100
MAINTENANCE TASK	Before each use	hours or yearly	hours or yearly	hours or yearly
PRESSURE WASHER				<u> </u>
Check/clean inlet screen.	X			
Check high pressure hose.	X		**************************************	
Check soap and chemical hose and filter	X			
Check gun and wand for leaks.	X			
Purge pump of air and contaminants	X			
Check pump oil	X			
Change pump oil	***************************************		x	
ENGINE				**************************************
Check oil level	X			
Change engine oil	······································		<u> </u>	

### **Product Specifications**

**Pressure Washer Specifications** 

Pressure	2500
Flow Rate	2.7 GPM
Cleaning Units (psi x GPM)	6750

#### **Engine Specifications**

RPM		3600
Rated Hors	epower	6.5
Spark Plug	Gap	0.030" (0.76mm)
Gasoline C	apacity	3 Quarts
Oil		SAE 30 weight
5 parts	Plus	type
		Champion
		RCIZYC

#### **General Recommendations**


The warranty of the high pressure washer does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, operator must maintain high pressure washer as instructed in this manual.

Some adjustments will need to be made periodocally to maintain your high pressure washer.

All adjustments in the Maintenance section of this manual should be made at least once each season.

Once a year you should clean or replace the spark plug and clean or replace the air filter and check the gun and wand assembly for wear. A clean spark plug and clean air filter assure proper fuel-air mixture and help your engine run better and last longer.

NOTE: Over time the o-rings in the gun assembly become worn. Attached to your owners manual is a replacement o-ring and split backup ring.



### **Pressure Washer Maintenance**

Check and Clean Inlet Screen: Examine inlet screen on pump inlet fitting. Clean if clogged replace if torn.

Check High Pressure Hose: High pressure hose can develop leaks from wear, kinking, and abuse. Inspect hose each time before use. Check for cuts, leaks, abrasionsor bulging of cover, damage or movement of couplings. If any of these conditions exist, replace hose immediately.

Check Chemical/Soap Hose: Examine the chemical/soap hose and clean if clogged. Hose should fit tightly on pump fitting. Check for leaks and tears. Replace filter or hose if either is damaged.

Check Gun and Wand: Examine hose connection to gun making sure it is secure. Test trigger by pressing it and making sure it springs back into place when you release it.

### Pump Oil

Pump oil level should be checked before each use.

### Changing Pump Oil

Oil should be changed after the first 10 hours of operation. Subsequent changes after each 50 hours of operation. To drain oil, simply remove oil plug with a adjustable wrench. The oil plug is located at the bottom of the pump. Dispose of used oil. Properly remove pump oil fill plug. Add 30 weight non-detergent oil. Fill until oil level is at the mid point on the sight glass.

### Purge Pump of Air and Contaminants

To remove the air from the pump, follow these steps:

- Set up the pressure washer as described in Assembly section and connect the water supply.
- Remove the wand extension from the spray gun.
- Pull the trigger on the gun and hold.

To remove the contaminants from the pump, follow these steps:

- Set up the pressure washer as described in ASSEMBLY section, connect the water supply.
- · Remove the wand extension from the spray gun.
- Start the engine according to instructions in the OPERATION section.

- · Pull the trigger on the gun and hold.
- When the water supply is steady and constant, disengage trigger and refasten the wand extension.

### **Engine Maintenance**

#### Oil

 Oil level should be checked prior to each use or at least every 5 hours of operation. To check oil see Adding Engine Oil on page 9.


### **Changing Engine Oil**

**For a new engine**, change oil after the first **5 hours** of operation. Thereafter, change oil after every **50 hours** of operation.

Change the oil while the engine is still warm. The oil will flow freely and carry away more impurities. Make sure the engine is level when filling, checking, or changing oil.


Change the oil as follows:

- To keep dirt, grass, etc., out of the engine, clean the area around the drain plug and oil plug before removing it.
- Remove the oil drain plug and oil plug. Tilt the engine slightly towards the oil drain to obtain better drainage.
   Be sure to allow ample time for complete drainage.



- Reinstall the drain plug. Make sure it is tightened securely.
- Fill the crankcase with new oil of the proper type, up to the threads in the oil port. Pour slowly.

· Reinstall the oil fill cap or plug and tighten securely.



### Service Air Cleaner

To service pre-cleaner, wash in liquid detergent and water. Allow to dry thoroughly before using. Do not oil pre-cleaner. Replace if very dirty or damaged.


**NOTE**: Do not use petroleum solvents, e.g., kerosene, which will cause the cartridge to deteriorate. Do not use pressurized air to clean cartridge. Pressurized air can damage the cartridge.

### To service air cleaner follow these steps:

- Unscrew cover screws. Remove cover and air cleaner assembly.
- Remove cartiridge from cover, then retainer (if equipped) and pre-cleaner.


**NOTE:** Do not use petroleum solvents, e.g., kerosene, which will cause the cartridge to deteriorate. Do not use *pressurized air* to clean cartridge. Pressurized air can damage the cartiridge.

- 3. Reassemble pre-cleaner or retainer (if equipped.)
  Place in cover with pre-cleaner mesh side toward
  cartridge. Place cartridge in retainer in cover.
- 4. Push cover and air cleaner assembly squarely onto base (tabs must be in slots, if equipped) and hold firmly. Tighten cover screws securely.




Keep engine and parts clean!

Do not clean engine with a forceful spray of water because water could contaminate fuel system. With a brush or cloth clean finger guard after every use to prevent engine damage caused by overheating.




Before running engine, clean muffler area to remove all combustible debris.



### Clean and Replace Spark Plug

Change the spark plug every 100 hours of operation or once each year, whichever comes first. This will help your engine to start easier and run better.



## SERVICE AND ADJUSTMENTS

### Carburetor

The carburetor of your high pressure washer is pre-set at the factory. The carburetor should not be tampered with. If you pressure washer is used at an altitude in excess of 5000 feet consult with your nearest Sears Service Center regarding high altitude set changes.

- ▲ CAUTION: Engine speed was properly adjusted at the factory and should require no additional adjustment. Do not attempt to change engine speed. If you believe the engine is running too fast or too slow, take your pressure washer to a Sears Authorized Service Center for repair and adjustment.
- ▲ WARNING: High engine speeds are dangerous and increase the risk of personal injury or damage to equipment.
- ▲ WARNING: Low engine speeds impose a heavy load on the engine and when sufficient engine power is not available could shorten engine life.

### Nozzle Maintenance

### Hi-Low Lance:

- 1. Shut off the pressure washer and turn off the water supply.
- 2. Disconnect spark plug wire.
- 3. Full trigger on gun handle to relieve any water pressure.
- 4. Disconnect the wand/lance from the gun.
- 5. Remove the high-pressure nozzle from the lance. Remove any obstructions with the nozzle cleaning tool provided and backflush with clean water.
- 6. Direct water supply into nozzle end to backflush loosened particles for 30 seconds.
- 7. Reassemble the nozzle to the lance using teflon tape to prevent leaks. Tighten securely.
- 8. Reconnect wand/lance to gun and turn on water supply.
- 9. Start pressure washer and place wand/lance into high pressure setting to test.

### STORAGE

This pressure washer should be stored in such a way to protect it from freezing. Do not store this unit outdoors or in an area where temperatures will fall below 32° F. This can cause extensive damage to this unit.

If unit has to be stored under freezing conditions a nontoxic R.V. anti-freeze can be used to protect from freezing.

### Preparing Pressure Washer for Storage

**NOTE:** If you do not plan to use your unit for 30 days or more, unit should be prepared for storage.

### **Engine Preparation**

- · First add a fuel stabilizer to the fuel tank.
- Run pressure washer for full 5 minutes to allow fuel stabilizer to enter the fuel system.

**NOTE:** While doing this procedure make sure water supply is turned on and flowing to the unit. **NEVER** run unit without water supply running through pump.

- Next shut off engine and disconnect the water supply.
- Disconnect the spark plug wire and remove the spark plug.

- Add one teaspoon of oil through the spark plug hole.
- Place rag over spark plug hole and pull the recoil a few times to lubricate the combustion chamber.
- Replace the spark plug, but do not connect the spark plug wire.

### Pump Preparation


- Be sure engine switch is in "OFF" position and spark plug wire has been removed from spark plug.
- Pull the trigger on the spay gun to release the pressure in the high pressure hose. Detach high pressure hose and garden hose from the unit.
- Pull the recoil on the engine 4 to 6 times to discharge remaining water in pump.
- Tip the unit on the end with the water inlet fitting pointing upward.
- Pour approximately 1/4 cup of non-toxic R.V. antifreeze down the fitting where the water hose attaches to the pump.
- Set unit upright and pull starter handle on engine 4 to 6 times to circulate anti-freeze in pump until antifreeze is discharged from the pump.

# **TROUBLESHOOTING**

SYMPTOM	CAUSE	SOLUTION
Engine won't start	Engine throttle is in "OFF" Position.     Choke lever has not been placed to choke.	Slide throttle to "Rabbit" position.     Slide choke lever to choke position.
	Pressure buildup after initial use.	3. Depress trigger gun.
Won't Draw Chemical	<ol> <li>Nozzle not in chemical draw position.</li> <li>Chemical screen is obstructed.</li> <li>Chemical screen not working.</li> <li>Chemical injector orifice obstructed or stuck.</li> <li>Chemical injector closed.</li> </ol>	<ol> <li>Place nozzle to low pressure.</li> <li>Check chemical screen; clean if obstructed.</li> <li>Make sure chemical screen is submerged in chemical/water.</li> <li>Check and clean.</li> <li>Open chemical injector by turning adjustment knob.</li> </ol>
Pump running normally but pressure does not achieve rated values	<ol> <li>Water supply restricted.</li> <li>Nozzle is in low PSI position.</li> <li>Nozzle incorrect or worn.</li> <li>Pump sucking air.</li> <li>Nozzle blocked.</li> </ol>	<ol> <li>Check water supply and filter screen for. blockage. Check hoses for blockage, kinks, leaks, etc.</li> <li>Twist nozzle at end of wand clockwise the high pressure position.</li> <li>Check and replace.</li> <li>Check that hoses and fittings are air-tight.</li> <li>Clean nozzle.</li> </ol>
Fluctuating Pressure	<ol> <li>Pump sucking air.</li> <li>Garden hose inlet strainer clogged.</li> <li>Worn Seals or Packing.</li> <li>Inadequate water supply.</li> <li>Fouled or dirty inlet or discharge valves.</li> <li>Leaky discharge hose.</li> </ol>	<ol> <li>Check that hoses and fittings are air tight. Purge air from garden hose.</li> <li>Clean. Check filter frequently.</li> <li>Check and replace.</li> <li>Check hose for kinks.</li> <li>Check flow available to pump. Check for excessive heat, 145° F or above.</li> <li>Clean inlet and discharge valve assemblies. Replace if damaged.</li> </ol>
Pressure drops after period of normal use	<ol> <li>Nozzle clogged, partially obstructed.</li> <li>Nozzle worn.</li> <li>Pump Valves worn, dirty or stuck.</li> <li>Worn pump piston packing.</li> </ol>	<ol> <li>Use nozzle cleaning kit to clear obstruction. (See Nozzle Maintenance under Service Adjustment.)</li> <li>Clean or replace.</li> <li>Check and replace.</li> <li>Check and replace.</li> </ol>
Pump noisy	Water too hot.     Pump sucking air.     Valves dirty or worn.     Worn bearings.	<ol> <li>Reduce temperature below 63° C or 145° F.</li> <li>Check that hoses and fittings are air tight.</li> <li>Check, clean or replace.</li> <li>Check and replace if necessary.</li> </ol>
Presence of water in oil (oil milky).	High humidity.     Piston packing and oil seal worn.	Change Oil.     Check and replace oil seals.
Water dripping from pump	Thermal relief functioning normal.     Fittings Loose.     O-rings of piston guide or retainer worn.     Piston packing worn.	<ol> <li>Protecting pump, if not using pressure washer for a long period of time, shutoff engine.</li> <li>Tighten.</li> <li>Check and replace.</li> <li>Check and replace.</li> </ol>
Oil Dripping	Oil seal worn     Loose drain plug or worn drain plug     o-ring.	Check and replace     Tighten drain plug or replace O-ring. Do not over torque.

### **PARTS**

### CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

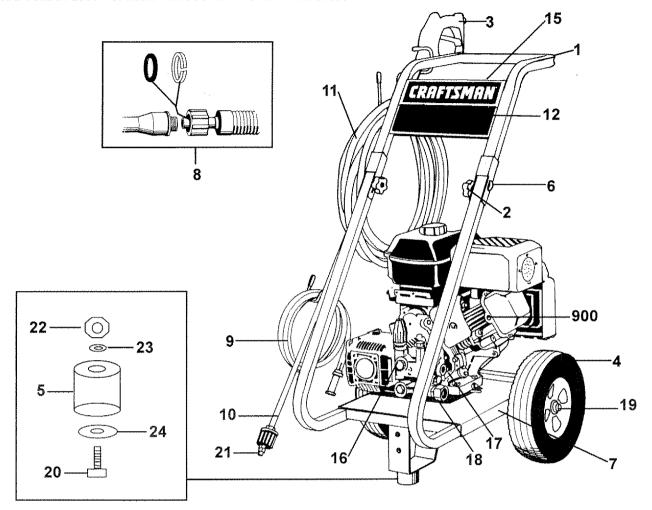


KEY#	PART NUMBER	DESCRIPTION	KEY#	PART NUMBER	DESCRIPTION
1	16498	Handle	21	N03515	Nozzle
2	16471	Knob	22	F119	Hex Nut
3	16396	Gun	23	F078	Lock Washer
4	16504	Tire Simi-Pnuematic	24	F112	Flat Washer
5	16371	Foot Rubber			
6	16470	J Bolt			
7	16503	Frame	<u> </u>		<del></del>
8	16830	O-ring Kit	P	ARTS NOT ILLUST	TRATED
9	H100	Chemical Hose	1	**************************************	wners Manual
10	16823	Lance Hi/Low	1	/	
11	15111	High Pressure Hose	1 -		ockwasher, Engine to Frame
12	16501	Decal Front Craftsman	1		ut Hex 3/8" Engine to Frame
900	No set series NA No	Engine (Refer to Engine Breakdown			crew 3/8" Engine to Frame
-		Briggs #121432-0112-E1)	1 "1		ockwasher-Pump to Engine
15	16727	Decal Operation	1		rew, Hex- Pump to Engine
16	PK16642	Pump			ockwasher- Pump to Engine
17	F035	High Pressure QC	1		ozzle Cleaning Kit
18	16829	Adapter- Garden Hose			C Socket for HP Hose
19	F464	Nut Pal 1/2"	1 1/		ozzle 3 pack 0°, 25°, 40°
20	F064	Srew Hex HDC		S	pray Pattern

# **PUMP PARTS**

### CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

**PUMP BREAKDOWN MODEL PK16642** 

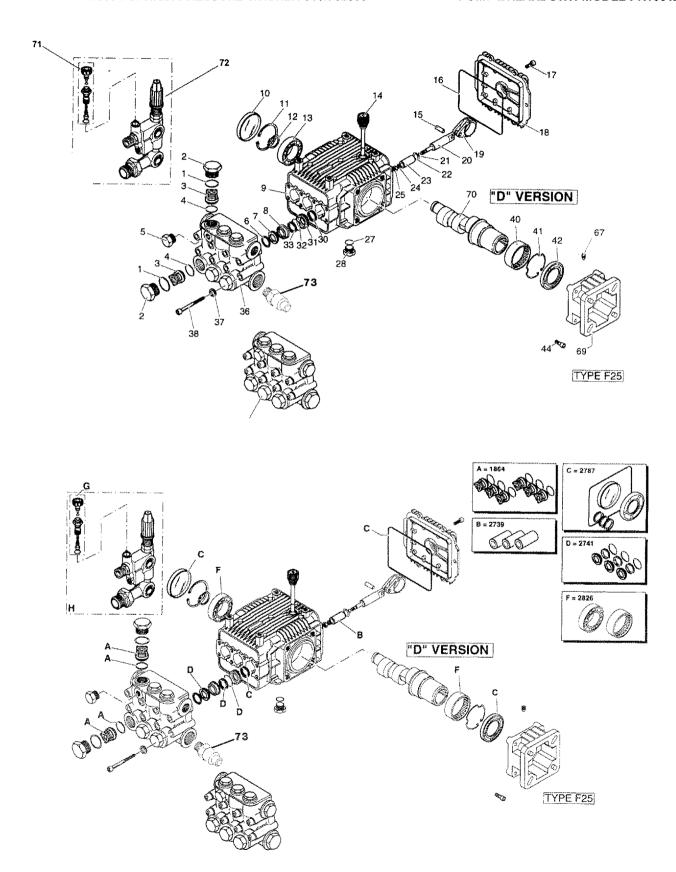

# PUMP PARTS


### CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

### **PUMP BREAKDOWN PK16642**

REF. NO.	PART NO.	DESCRIPTION	QTY.	REF. NO.	PART NO.	DESCRIPTION	QTY.
				<del> </del>			**************************************
1	AR-960160	O-Ring	6	23	AR-1780070		3
2	AR-1260162	Plug	6	24	AR-1260100		3
3	AR-1269050	Complete valve	6	25	AR-1260110		3
4	AR-880830	O-Ring	6	27	AR-740290	O-Ring	2
5	AR-620301	Plug	1	and the same of th			
6	AR-1780130	Support ring	3	28	AR-880530	Plug	2
7	AR-1260130	Gasket	3	30	AR-1260460	Seal	3
8	AR-1780090	Piston guide	3	31	AR-1780100	Rear Piston guide	3
9	AR-1780010	Pump body	4	32	AR-770260	O-Ring	3
10	AR-1266740	Cap	1	33	AR-1260440	Gasket	3
11	AR-1260790	Circlip	1	36	AR-1780380	Head	1
12	AR-1780550	Snap ring	· ·	37	AR-1381550	Washer	8
13	AR-1780490	Bearing	*	38	AR-680570	Screw	8
14	AR-880130	Oil cap	· Periodical Control of Control o	40	AR-1321190	Bearing	1
15	AR-1780050	Piston pin	3	41	AR-1321080	Snap ring	1
16	AR-1780510	O-Ring	1	42	AR-480671	Seal	1
17	AR-1200430	Screw	6	44	AR-180030	Screw	4
18	AR-1789010	Complete cover	1	67	AR-820440	Grub screw	1
19	AR-1780040	Conrod	3	68	AR-1789200	Pump head pre-ass	3. 1
20	AR-1780060	Guiding piston	3	69	AR-1380580	Gas engine flange	4
21	AR-480480	O-Ring	3	70	AR-1780590	Hollow shaft ¾"	1
22	AR-1260091	Spacer disc	3	71	16747	Chemical Injector	4
		r		72	AR-2973	Unloader	1
				73	16506	Thermal Relief Valve	e 1


PARTS KITS							
	A=KIT 16739 B=KIT 16746 Valves Pistons		C=KIT 16748 Oil Seals for D Version				
Pos.	Qty.	Pos.	Qty.	Pos.	Qty.		
4	6			16 30 42	1 3 1		
D=KIT Water		F=KIT 16749 Bearings			T 16747 ctor Kit	Unload	T 16744 Ier O-Ring (it
Pos.	Qty.	Pos.	Qty.	Pos.	Qty.	Pos.	Qty.
7 32 33	3 3 3	13 40	<b>1</b>	Quima	1		

CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

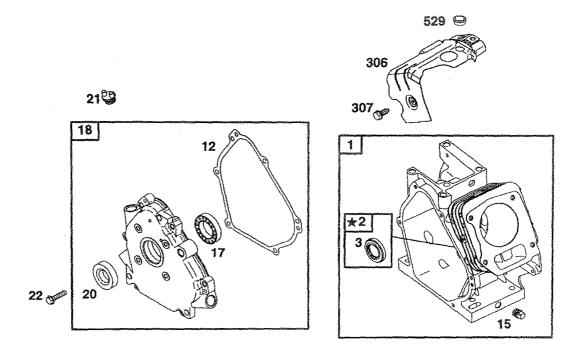


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1 2 3 2 5	690045(P)	Cylinder Assembly	17	692510	Bearing-Ball	306	692552	Shield-Cylinder
	399269	Bushing	18	690047	Cover-Crankcase	307	690345	Screw-Hex.
	692266	Seal-Oil	20	692550	Seal-Oil	529	692553	Grommet
	692549	Gasket-Crankcase	21	692261	Cap-Oil Fill	1019	690035	Label Kit
	691696	Plug-Oil	22	692551	Screw-Hex.	1058	273700	Owner's Manual

CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

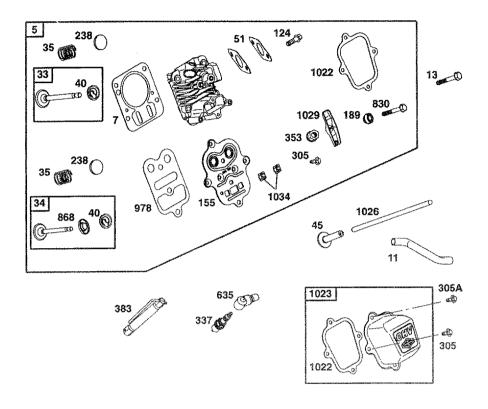


REF. PART NO. NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5 49992 7 69255 11 69260 13 69113 33 49964 34 49964 35 69130 40 69219 45 69097 51 69255 124 69256	Gasket-Cylinder Head Tube-Breather Corew-Hex. Valve-Exhaust Valve-Intake Spring-Valve Retainer-Valve Tappet-Valve Gasket-Intake	155 189 238 305 305A 337 353 383 635 830	692556 691295 691300 691108 692557 690965 692558 19374 692186 692559	Plate-Cylinder Head Ball-Rocker Arm Cap-Valve Screw-Hex. Screw-Hex. Plug-Spark Nut-Hex. Wrench-Spark Plug Boot-Spark Plug Screw-Hex.	868 978 1022 1023 1026 1029 1034	692044 691892 691890 499924 692560 691230 691343	Seal-Valve Gasket-Plate Gasket-Rocker Cover Cover-Rocker Rod-Push Arm-Rocker Guide-Push Rod

### CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

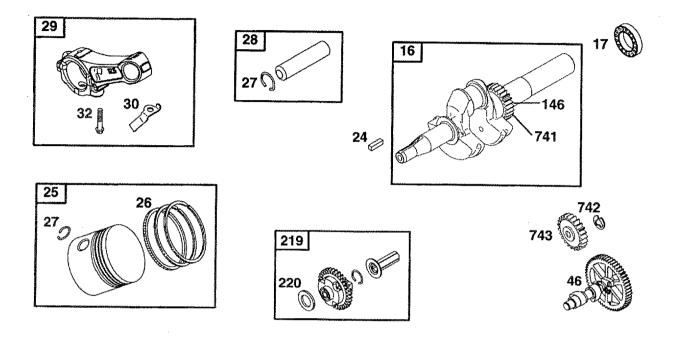


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16 17 24 25 26 27 28	692561 692510 690974 499627 499631 691866 499423	Crankshaft Bearing-Ball Key-Flywheel Piston Assembly Ring Set Lock-Piston Pin Pin-Piston	29 30 32 46	690124 692562 691664 692563	Rod-Connecting Dipper-Connecting Rod Screw-Connecting Rod Gear-Cam	146 219 220 741 742 743	690979 692418 691724 692565 692564 692566	Key-Timing Gear-Governor Washer-Thrust Gear-Timing Ring-Retaining Gear-Idler

### CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

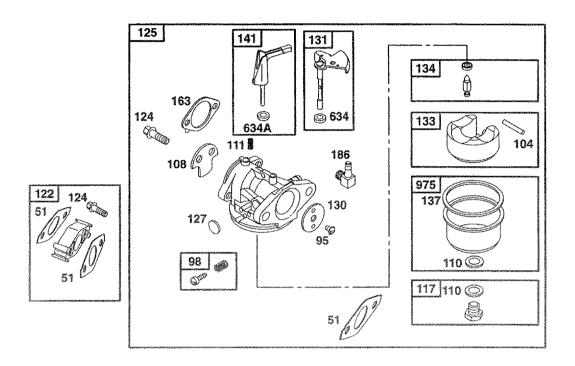


REF.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51 95 98 104 108 110	692555 691636 398185 691242 692567 690572	Gasket-Intake (2 Required) Screw-Slotted Screw-Idle Speed Pin-Float Hinge Valve-Choke Washer-Seal (Sold in Kit Only) Spring-Friction (Choke)	117 122 127 130 131 133 134	690048 690043 691181 699024 398187 398188	Jet-Main (Standard) Spacer-Carburetor Plug-Welch (Sold in Kit Only) Valve-Throttle Shaft-Throttle Float-Carburetor Valve-Needle	137 141 163 186 634 634A 975	699023 691887 692317 493640	Gasket-Float Bowl (Sold in Kit Only) Shaft-Choke Gasket-Air Cleaner Connector-Hose Washer (Sold in Kit Only) Washer (Sold in Kit Only) Bowl-Float

### CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

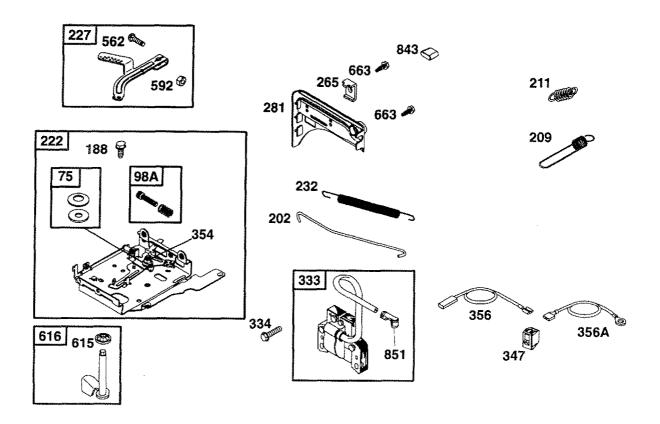


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
75 98A 188 202 209 211 222 227	495659 493280 690877 692569 692569 691798 692572 692573	Washer Set Screw-Idle Speed Screw-Hex. Link-Mechanical Governor Spring-Governor Spring-Governor Bracket-Control Lever-Governor	232 265 267 281 333 334 347 354 356	692570 691024 690804 692574 692605 691061 692599 692575 692602	Spring-Link Clamp-Casing Screw-Slotted Hex. Panel-Control Armature-Magneto Screw-Hex. Switch-Rocker Nut-Lock Wire-Stop	356A 562 592 615 616 663 843 851	692603 691112 691251 692576 692547 692577 692578 493880	Wire-Stop Bolt-Governor Level Nut-Hex. Retainer-Governor Crank-Governor Screw-Slotted Hex. Sleeve-Lever Terminal-Cable


CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

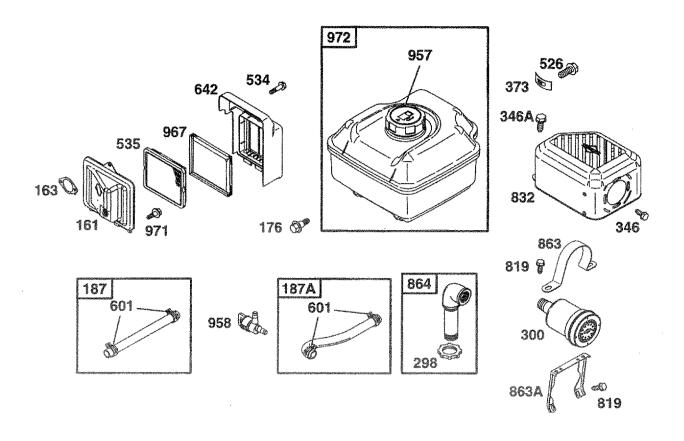


REF. PART NO. NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161 692579 163 691887 176 692127 187 298049 187A 692601 298 690453 300 692580	Base-Air Cleaner Gasket-Air Cleaner Screw-Shoulder Line-Fuel (Cut to Required Length) Line-Fuel (Molded) Locknut-Muffler Muffler-Exhaust	346 346A 373 526 534 535 601 642 819 832	690661 692581 692582 691127 692583 691710 692201 692584 692598 692584	Screw-Hex. Screw-Hex. Nut-Tinnerman Screw-Hex. Screw-Slotted Hex. Filter-Air Clamp-Hose Cover-Air Cleaner Screw-Hex. Guard-Muffler	863 863A 864 957 958 967 971 972	692595 692596 692548 691654 692586 691706 691106 692587	Bracket-Muffler Bracket-Muffler Adapter-Muffler Cap-Fuel Tank Valve-Shutoff Filter-Air (Pre-Filter) Screw-Shoulder Tank-Fuel

CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

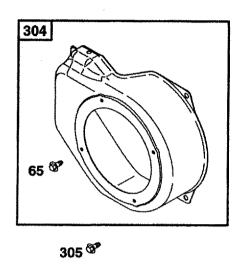

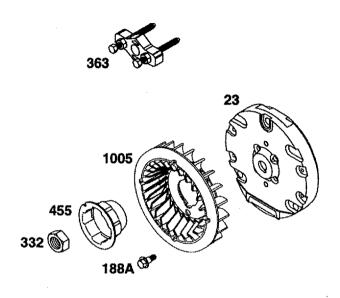


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	692588	Flywheel	304	692589	Housing-Blower	363	19069	Flywheel Puller
65	692608	Screw-Hex.	305	691108	Screw-Hex.	455	692591	Cup-Flywheel
188A	692590	Screw-Shoulder	332	690662	Nut-Flywheel	1005	692592	Fan-Flywheel

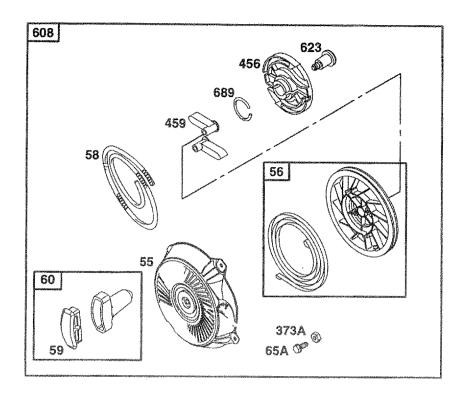

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691422	Housing-Rewind Starter	60 60A	393152 691930	Grip-Starter Rope Grip-Starter Rope	459 608	692260 497830	Pawl-Ratchet Starter-Rewind
56 58	4981 <b>4</b> 4 69 <b>2</b> 593	Pulley-Starter Rope-Starter (Cut To	65A 373A	690837 690800	Screw-Hex. Nut-Hex.	623 689	691696 691855	Screw-Shoulder Spring-Friction
59	692594	Suit) Insert-Grip	456	692299	Retainer-Spring			
						70°-100 ANT		
Marillo General Grant and Communication and Comm		- 100 HTMM Malakanyumuyayayayaya		<del></del>				

CRAFTSMAN 2500 PSI HIGH PRESSURE WASHER 919.762500

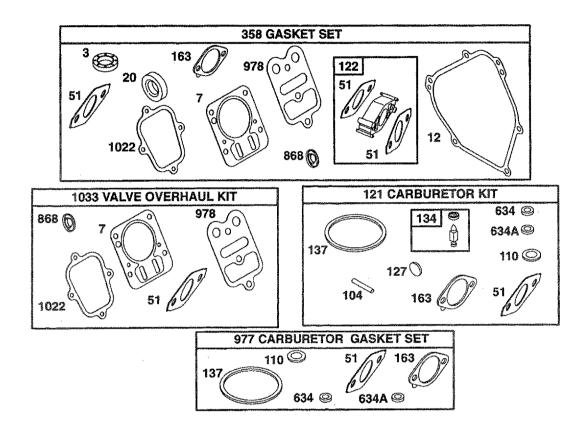

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3 7 12 20 51 104 110 121 122	692266 692554 692550 692555 691242 690032 690043	Seal-Oil Gasket-Cylinder Head Gasket-Crankcase Seal-Oil Gasket-Intake (2 Required) Pin-Float Hinge Washer-Seal (Sold in Kit Only) Carburetor Kit Spacer-Carburetor	127 134 137 163 358 634	398188 691887 690031	Plug-Welch (Sold in Kit Only) Valve-Needle (Includes Seat) Gasket-Float Bowl (Sold in Kit Only) Gasket-Air Cleaner Gasket Set Washer-Shaft (Throttle Shaft) (Sold in Kit Only)	634A 868 977 978 1022 1033	692044 690033 691892 691890 690034	Washer-Shaft Choke Shaft (Sold in Kit Only) Seal-Valve Gasket Set-Carburetor Gasket-Plate Gasket-Rocker Cover Kit-Valve Overhaul

# Briggs & Stratton Corporation (B&S), the California Air Resources Board (CARB) and the United States Environmental Protection Agency (U.S. EPA)

Emission Control System Warranty Statement (Owner's Defect Warranty Rights and Obligations)
ne environment, B&S engines that meet strict emisTO CERTIFIED ENGINES PURCHASED IN CALIFORNIA IN 1995

In the interest of the environment, B&S engines that meet strict emission requirements are labeled, "This engine conforms to 1995 - 1998 California emission regulations for ULGE engines and U.S. EPA Phase I regulations for small non-road engines."

EMISSION CONTROL WARRANTY COVERAGE IS APPLICABLE

### California and United States Emission Control Defects Warranty Statement

CARB, U.S. EPA and B&S are pleased to explain the Emission Control System Warranty on your 1996 and later utility or lawn and garden equipment (ULGE) engine. In California, new ULGE engines produced on or after August 1, 1995 must be designed, built and equipped to meet the State's stringent anti-smog standards. Elsewhere in the United States, new non-road, spark-ignition engines certified for model year 1997 and later, must meet similar standards set forth by the U.S. EPA. B&S must warrant the emission control system on your engine for the periods of time listed below, provided

TO CERTIFIED MODEL YEAR 1997 AND LATER ENGINES WHICH ARE PURCHASED AND USED ELSEWHERE IN THE UNITED STATES.

Control Defects Warranty Statement there has been no abuse, neglect or improper maintenance of your

AND THEREAFTER, WHICH ARE USED IN CALIFORNIA, AND

ULGE engine.

Your emission control system includes parts such as the carburetor, air cleaner, ignition system, muffler and catalytic converter. Also included may be connectors and other emission related assemblies. Where a warrantable condition exists, B&S will repair your ULGE engine at no cost to you including diagnosis, parts and labor.

#### **Briggs & Stratton Emission Control Defects Warranty Coverage**

ULGE engines are warranted relative to emission control parts defects for a period of two years, subject to provisions set forth

below. If any covered part on your engine is defective, the part will be repaired or replaced by B&S.

#### Owner's Warranty Responsibilities

As the ULGE engine owner, you are responsible for the performance of the required maintenance listed in your Operator/Owner Manual. B&S recommends that you retain all your receipts covering maintenance on your ULGE engine, but B&S cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the ULGE engine owner, you should however be aware that B&S may deny you warranty coverage if your ULGE engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your ULGE engine to an Authorized B&S Service Dealer as soon as a problem exists. The undisputed warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact a B&S Service Representative at 1-414-259-5262.

The emission warranty is a defects warranty. Defects are judged on normal engine performance. The warranty is not related to an in-use emission test.

#### **Briggs & Stratton Emission Control Defects Warranty Provisions**

The following are specific provisions relative to your Emission Control Defects Warranty Coverage. It is in addition to the B&S engine warranty for non-regulated engines found in the Operator/Owner Manual.

### 1. Warranted Parts

Coverage under this warranty extends only to the parts listed below (the emission control systems parts) to the extent these parts were present on the engine purchased.

- a. Fuel Metering System
  - Cold start enrichment system (soft choke)
  - · Carburetor and internal parts
  - Fuel Pump
- b. Air Induction System
  - Air cleaner
  - Intake manifold
- c. Ignition System
  - Spark plug(s)
  - Magneto ignition system
- d. Catalyst System
  - Catalytic converter
  - Exhaust manifold
  - Air injection system or pulse valve
- . Miscellaneous Items Used in Above Systems
  - Vacuum, temperature, position, time sensitive valves and switches
  - Connectors and assemblies
- 2. Length of Coverage

B&S warrants to the initial owner and each subsequent purchaser that the Warranted Parts shall be free from defects in materials and workmanship which caused the failure of the Warranted Parts for a period of two years from the date the engine is delivered to a retail purchaser.

#### 3. No Charge

Repair or replacement of any Warranted Part will be performed at no charge to the owner, including diagnostic labor which leads to the determination that a Warranted Part is defective, if the diagnostic work is performed at an Authorized B&S Service Dealer. For emissions warranty service contact your nearest Authorized B&S Service Dealer as listed in the "Yellow Pages" under "Engines, Gasoline," "Gasoline Engines," "Lawn Mowers," or similar category.

4. Claims and Coverage Exclusions

Warranty claims shall be filed in accordance with the provisions of the B&S Engine Warranty Policy. Warranty coverage shall be excluded for failures of Warranted Parts which are not original B&S parts or because of abuse, neglect or improper maintenance as set forth in the B&S Engine Warranty Policy. B&S is not liable to cover failures of Warranted Parts caused by the use of add-on, non-original, or modified parts.

Maintenance

Any Warranted Part which is not scheduled for replacement as required maintenance or which is scheduled only for regular inspection to the effect of "repair or replace as necessary" shall be warranted as to defects for the warranty period. Any Warranted Part which is scheduled for replacement as required maintenance shall be warranted as to defects only for the period of time up to the first scheduled replacement for that part. Any replacement part that is equivalent in performance and durability may be used in the performance of any maintenance or repairs. The owner is responsible for the performance of all required maintenance, as defined in the B&S Operator/Owner Manual.

6. Consequential Coverage

Coverage hereunder shall extend to the failure of any engine components caused by the failure of any Warranted Part still under warranty.

Briggs & Stratton welcomes warranty repair and apologizes to you for being inconvenienced. Any Authorized Service Dealer may perform warranty repairs. Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty would not apply if engine damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, warranty is void if the serial number of the engine has been removed or the engine has been altered or modified.

If a customer differs with the decision of the Service-Dealer, an investigation will be made to determine whether the warranty applies. Ask the Service Dealer to submit all supporting facts to his Distributor or the Factory for review. If the Distributor or the Factory decides that the claim is justified, the customer will be fully reimbursed for those items that are defective. To avoid misunderstanding which might occur between the customer and the Dealer, listed below are some of the causes of engine failure that the warranty does not cover.

### Improper maintenance:

The life of an engine depends upon the conditions under which it operates, and the care it receives. Some applications, such as tillers, pumps and rotary mowers, are very often used in dusty or dirty conditions, which can cause what appears to be premature wear. Such wear, when caused by dirt, dust, spark plug cleaning grit, or other abrasive material that has entered the engine because of improper maintenance, is not covered by warranty.

This warranty covers engine related defective material and/or workmanship <u>only</u>, and not replacement or refund of the equipment to which the engine may be mounted. Nor does the warranty extend to repairs required because of:

- PROBLEMS CAUSED BY PARTS THAT ARE NOT ORIGINAL BRIGGS & STRATTON PARTS.
- Equipment controls or installations that prevent starting, cause unsatisfactory engine performance, or shorten engine life. (Contact equipment manufacturer.)
- Leaking carburetors, clogged fuel pipes, sticking valves, or other damage, caused by using contaminated or stale fuel. (Use clean, fresh, lead-free gasoline and Briggs & Stratton gasoline stabilizer, Part No. 5041.)

- 4. Parts which are scored or broken because an engine was operated with insufficient or contaminated lubricating oil, or an incorrect grade of lubricating oil (check oil level daily or after every 8 hours of operation. Refill when necessary and change at recommended intervals.) Read "Owner's Manual."
- Repair or adjustment of associated parts or assemblies such as clutches, transmissions, remote controls, etc., which are not manufactured by Briggs & Stratton.
- 6. Damage or wear to parts caused by dirt, which entered the engine because of improper air cleaner maintenance, re-assembly, or use of a non-original air cleaner element or cartridge. (At recommended intervals, clean and re-oil the Oil-Foam® element or the foam pre-cleaner, and replace the cartridge.) Read "Owner's Manual."
- 7. Parts damaged by overspeeding, or overheating caused by grass, debris, or dirt, which plugs or clogs the cooling fins, or flywheel area, or damage caused by operating the engine in a confined area without sufficient ventilation. (Clean fins on the cylinder, cylinder head and flywheel at recommended intervals.) Read "Owner's Manual."
- Engine or equipment parts broken by excessive vibration caused by a loose engine mounting, loose cutter blades, unbalanced blades or loose or unbalanced impellers, improper attachment of equipment to engine crankshaft, overspeeding or other abuse in operation.
- A bent or broken crankshaft, caused by striking a solid object with the cutter blade of a rotary lawn mower, or excessive v-belt tightness.
- 10. Routine tune-up or adjustment of the engine.
- 11. Engine or engine component failure, i.e., combustion chamber, valves, valve seats, valve guides, or burned starter motor windings, caused by the use of alternate fuels such as, liquified petroleum, natural gas, altered gasolines, etc.

### For the repair or replacement parts you need

Call 7 am - 7 pm, 7 days a week

1-800-366-PART

(1-800-366-7278)



### For in-home major brand repair service Call 24 hours a day, 7 days a week

1-800-4-REPAIR

(1-800-473-7247)



# For the location of a Sears Parts and Repair Center in your area

Call 24 hours a day, 7 days a week

1-800-488-1222



For information on purchasing a Sears
Maintenance Agreement or to inquire
about an existing Agreement
call 9 am - 5 pm, Monday-Saturday

1-800-827-6655






# MANUAL DEL OPERADOR

# **CRAFTSMAN**<sub>®</sub>

Lavadora de Alta Presión 6.5 Caballos de Fuerza 2500 PSI 2.7 GPM

Modelo No. 919.762500

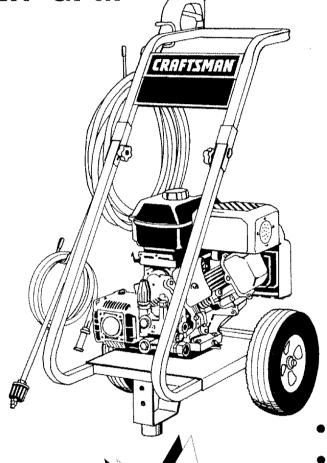

ADVERTENCIA: Leer este manual y observar todas las Precauciones de Seguridad e Instrucciones de Operación antes de usar este equipo. SeguridadEnsamblaje

Operación

Mantenimiento

Lista de Partes

Español

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.

LINEA DE AYUDA AL

CLIENTE PARA A LA

MAQUINA LAVADORA

A PRESION

800-245-5873

### TABLA DE CONTENIDOS

Garantía 34	Servicio y Regulaciones45
Pautas de Seguridad35-37	Almacenamiento 45
Ensamblaje37-39	Guía para Diagnóstico de Problemas 46
Operación40-44	Partes47-50
Mantenimiento42-44	Cómo Ordenar RepuestosContratapa

# GARANTÍA LIMITADA DE UN AÑO PARA LAVADORAS CRAFTSMAN DE ALTA PRESIÓN

Por un año a partir de la fecha de compra, y siempre que esta Lavadora Craftsman de Alta Presión se mantenga y opere de acuerdo a las instrucciones en el Manual del Operador, Sears reparará cualquier defecto de material o fabricación sin costo alguno.

Si esta Lavadora Craftsman a Presión se usa para propósitos comerciales o para alquiler, esta garantía sólo será aplicable por 90 días a partir de la fecha de compra.

### GARANTÍA LIMITADA DE UN AÑO DEL MOTOR CRAFTSMAN

Por un año a partir de la fecha de compra de este motor Craftsman y siempre que se mantenga y opere de acuerdo a las instrucciones en el Manual del Operador, Sears reparará cualquier defecto de material o fabricación sin costo alguno.

Si el motor Craftsman se usa para propósitos comerciales o de alquiler, la garantía sólo será aplicable por 90 días a partir de la fecha de compra. Esta garantía no cubre piezas sujetas a desgaste tales como bujías y filtros de aire, los cuales se gastan con el uso normal.

La garantía no cubre las reparaciones que se hagan necesarias debido al mai uso o negligencia de parte del operador, incluyendo daños causados por no suministrarle agua a la bomba o no mantener el equipo de acuerdo a las instrucciones contenidas en este manual.

SE PUEDE OBTENER SERVICIO POR GARANTÍA SI SE LLEVA LA LAVADORA DE ALTA PRESIÓN AL CENTRO/DEPARTAMENTO DE SERVICIO DE GARANTÍA MÁS CERCANO EN CUALQUIER LUGAR DE ESTADOS UNIDOS. Esta garantía le otorga ciertos derechos legales específicos y usted también podría tener otros derechos que varían de un estado a otro.

Sears, Roebuck and Co., D/817 WA, Hoffman Estates, IL 60179

### PAUTAS DE SEGURIDAD - DEFINICIONES

Este manual contiene información que es importante que usted sepa y entienda. Esta información se relaciona con la protección de SU SEGURIDAD y la PREVENCIÓN DE PROBLEMAS AL EQUIPO. Para ayudarle a identificar esta información usamos los siguientes símbolos. Por favor leer este manual y prestar atención especial a estas secciones. **CONSERVAR ESTAS DEFINICIONES/INSTRUCCIONES.** 

- A ADVERTENCIA indica una situación potencialmente riesgosa, la cual, si no se evita puede causar lesiones serias o muerte.
- ▲ PELIGRO indica una situación riesgosa inminente que si no se evita <u>causará lesiones</u> serias o muerte.
- ▲ CUIDADO indica una situación potencialmente peligrosa que si no se evita <u>puede causar</u> lesiones menores.

10/2/97

### INSTRUCCIONES IMPORTANTES DE SEGURIDAD

### **ADVERTENCIA**

LA OPERACIÓN O EL MANTENIMIENTO INAPROPIADOS DE ESTA UNIDAD PUEDEN CAUSAR LESIONES SERIAS Y DAÑOS A LA PROPIEDAD. LEER Y ENTENDER TODAS LAS ADVERTENCIAS DE SEGURIDAD E INSTRUCCIONES DE OPERACIÓN ANTES DE USAR ESTA UNIDAD.

RIESGO	QUE PUEDE SUCEDER	COMO PREVENIRLO
A PELIGRO RIEGO DE INCENDIO O EXPLOSIÓN	La gasolina y los vapores de gasolina pueden encenderse con las chispas de los cigarrillos, arcos eléctricos, gases de escape y los componentes calientes de los motores tales como el mofle.	Apagar el motor y permitir que se enfríe antes de agregar combustible al tanque.
THE THE	El calor expandirá el combustible en el tanque lo cual puede causar un derrame y posiblemente fuego o explosión.	<ul> <li>Tener cuidado al llenar el tanque para evitar derramar el combustible. Retirar la lavadora de presión del área de relleno de combustible antes de arrancar el motor.</li> </ul>
		<ul> <li>Mantener el nivel máximo del combustible a 1.5 cm por debajo de la tapa del tanque de combustible para dejar sitio para la expansión.</li> </ul>
	Operar la unidad en un ambiente con riesgos de explosión, puede causar un incendio.	Operar y agregar combustible al equipo en áreas bien ventiladas y libres de obstrucciones. Equipar el área de operación con extinguidor(es) adecuado(s) para incendios de gasolina.
	Los materiales colocados contra la lavadora de presión o cerca de ésta pueden interferir con su ventilación apropiada causando sobrecalentamiento y posible inflamación de los materiales.	Nunca operar la lavadora de presión en un área que contenga hierbas o ramas secas.
	<ul> <li>El combustible indebidamente guardado puede causar una ignición accidental. El combustible indebidamente asegurado puede caer en las manos de niños u otras personas indebidas.</li> </ul>	Almacenar la gasolina en envase designado para contener gasolina y en un lugar seguro lejos del área de trabajo.
A PELIGRO RIESGO A LA RESPIRACIÓN	Inhalar los gases del escape causará lesiones serias o muerte.	Operar la lavadora de presión en un área bien ventilada. Evitar áreas cerradas tales como garajes, sótanos, etc.
	<ul> <li>Algunos líquidos limpiadores contienen sustancias que pueden causar daño a la piel, los ojos o los pulmones.</li> </ul>	<ul> <li>Nunca operar la unidad en lugares ocupados por personas ni animales.</li> <li>Solo usar líquidos limpiadores especialmente recomendados para lavadoras de alta presión. Seguir las recomendaciones del fabricante.</li> </ul>

# INSTRUCCIONES IMPORTANTES DE SEGURIDAD (Cont.)

RIESGO	QUE PUEDE SUCEDER	COMO PREVENIRLO
ADVERTENCIA RIESGO POR OPERACIÓN INSEGURA	<ul> <li>La operación o mantenimiento inadecuados de la lavadora de presión puede causar lesiones serias o muerte al operador o a otras personas.</li> <li>La pistola/tubo aplicador es una herramienta potente de limpieza y a un niño podría parecerle un juguete.</li> <li>La fuerza reactiva del chorro hará que el aplicador "patee" y pueda causar que el operador se resbale y caiga o dirija mal el chorro. La pérdida de control del aplicador puede causar lesiones al mismo operador o a otros.</li> </ul>	<ul> <li>Familiarizarse con la operación y los controles de la lavadora de presión.</li> <li>Mantener a los niños alejados de la lavadora de presión en todo momento.</li> <li>Nunca burlar los dispositivos de seguridad de este equipo.</li> <li>No operar la máquina con piezas faltantes, rotas o no autorizadas.</li> <li>Nunca dejar desatendido el tubo aplicador cuando la lavadora esté en operación.</li> <li>Mantener el área de trabajo libre de obstáculos.</li> <li>Pararse en una superficie estable y agarrar con firmeza la pistola/tubo aplicador. Prepararse para el retroceso de la pistola aplicadora cada vez que se presione el gatillo.</li> </ul>
ADVERTENCIA RIESGO DE LESIONES POR EL CHORRO	<ul> <li>El chorro de los líquidos a alta velocidad puede causar la rotura de algunos objetos proyectando sus partículas a altas velocidades.</li> <li>Los objetos livianos o que no estén sujetos se pueden convertir en proyectiles peligrosos.</li> </ul>	<ul> <li>Siempre usar anteojos de seguridad que cumplan con la norma Z87 de ANSI. Siempre usar ropa especial para protegerse del chorro.</li> <li>Nunca apuntar el tubo aplicador ni dirigir el chorro a personas ni animales.</li> <li>Para evitar que se accione accidentalmente siempre enganchar el seguro del gatillo cuando la pistola aplicadora no esté en uso.</li> <li>Nunca fijar el gatillo permanentemente en la posición de abierto.</li> </ul>
ADVERTENCIA RIESGO DE CHOQUE ELÉCTRICO	<ul> <li>Dirigir el chorro hacia tomacorrientes o interruptores eléctricos, o hacia objetos conectados al suministro eléctrico puede causar choque eléctrico.</li> </ul>	Desconectar cualquier aparato eléctrico antes de intentar limpiarlo. No dirigir el chorro a tomacorrientes ni a interruptores eléctricos.
ADVERTENCIA RIESGO DE INYECCIÚN DE LÍQUIDO	<ul> <li>La máquina opera con fluidos a alta presión y a velocidades lo suficientemente altas para penetrar el cuerpo de personas y animales, lo cual puede resultar en lesiones serias y aniputación. Las pérdidas causadas por conexiones flojas o gastadas pueden causar inyección y lesiones. ¡NO TRATAR LA INYECCIÓN DE LÍQUIDOS COMO UN SIMPLE CORTE! Obtener atención médica de inmediato.</li> <li>Aliviar la presión del sistema antes de intentar darle mantenímiento o desensamblarlo.</li> </ul>	<ul> <li>Nunca colocar las manos delante de la boquilla.</li> <li>No dirigir el chorro hacia uno mismo ni hacia otras personas.</li> <li>Asegurarse que la manguera y las conexiones estén bien ajustadas y en buenas condiciones. Nunca agarrar la manguera ni las conexiones durante la operación.</li> <li>No permitir que la manguera entre en contacto con el mofle.</li> <li>Nunca poner ni quitar el tubo aplicador ni los acoples de la manguera mientras que el sistema esté presurizado.</li> <li>Usar únicamente mangueras y accesorios de alta presión para servicio a 2500 PSI.</li> <li>Para aliviar la presión del sistema, apagar el motor, cortar el suministro de agua y tirar del gatillo hasta que el agua deje de fluir.</li> </ul>
ADVERTENCIA RIESGO DE QUEMADURAS QUÍMICAS	El uso de ácidos, químicos tóxicos o corrosivos, venenos, insecticidas, o cualquier tipo de solvente inflamable en esta unidad pueden causar lesiones personales serias o muerte.	<ul> <li>No usar ácidos, gasolina, kerosene ni otros materiales inflamables en esta unidad. Sólo usar detergentes domésticos, limpiadores y desengrasantes recomendados para usar en esta lavadora de presión.</li> <li>Usar ropa protectora para evitar que los ojos y la piel entren en contacto con los materiales rociados.</li> </ul>

### **INSTRUCCIONES IMPORTANTES DE SEGURIDAD (Cont.)**

RIESGO	QUE PUEDE SUCEDER	COMO PREVENIRLO
ADVERTENCIA RIESGO POR SUPERFICIES CALIENTES	El contacto con superficies calientes, tales como los componentes del escape, puede causar quemaduras serias.	Durante la operación, sólo tocar las superficies de control. Mantener a los niños alejados de la lavadora en todo momento. Ellos pueden no reconocer los riesgos de esta máquina.

### IMPORTANTE:

El poderoso chorro producido por la lavadora de presión es capaz de dañar superficies frágiles tales como; madera, vidrio, pintura y molduras automotrices, y objetos delicados tales como flores y arbustos. Antes de rociar, inspeccionar el objeto a limpiarse para asegurarse que es lo suficientemente robusto como para resistir la fuerza del chorro sin sostener daños. Evitar usar chorros muy concentrados excepto para limpiar superficies fuertes tales como concreto y acero.

Operar la unidad con el suministro de agua cerrado y sin flujo de agua le causará daños al equipo. Nunca se debe operar esta lavadora de presión por más de 2 minutos sin tirar del gatillo para permitir el ingreso de agua fría a la bomba y que haga salir el agua caliente. Operar la lavadora de presión con el flujo de agua cortado anulará la garantía.

### **ENSAMBLAJE**

### Contenidos de la Caja

- Unidad principal de la lavadora a presión con ruedas
- Asa
- Manguera para alta presión
- Manguera absorbente de soluciones químicas v filtro
- Pistola
- Tubo aplicador



Unidad principal de la lavadora a presión con ruedas





Manguera para alta presión



Manguera absorbente de soluciones químicas y filtro




Pistola y Tubo aplicador

- Bolsa conteniendo
  - Casete de vídeo
  - · Manual del Operador
  - Juego de limpiador de boquillas y anillos "O" de repuesto
  - Botella de aceite para motor
  - Tope amortiguador de caucho para pata y elemento de fijación
  - · Elementos de sujeción para el asa







Casete de vídeo

Manual del Operador Juego de limpiador de boquillas





Elementos de sujeción para el asa

Anillos "O" de repuesto

Tope amortiguador de caucho para pata y elemento de fijación

#### Herramientas Requeridas para el Ensamblaje

Llave regulable para tuercas Llave de dado de 1/2"

#### Sacar la Lavadora de Presión de la Caja


- Abrir la caja por la parte de arriba. Dentro de la caja ubicar y sacar la caja con piezas que incluye la pistola, el asa, el tubo aplicador, la botella de aceite, las perillas y pernos J. Luego sacar la bolsa con piezas y el asa.
- Cortar la caja a lo largo de la línea punteada.
- Sacar todos los insertos de cartón.

**NOTA**: La manguera para alta presión y la manguera para químicos están en el fondo de la caja.


## Preparación de la Lavadora de Presión para el Primer Uso

**Nota:** En la caja de la lavadora se incluye una cinta de vídeo que muestra como preparar la unidad para su operación. Se recomienda ver esta cinta de vídeo antes de continuar con los siguientes pasos.


- 1. Insertar el asa en el bastidor.
  - Delizar los pernos J en el bastidor.
  - Ajustar las perillas girándolas en el sentido del reloj.

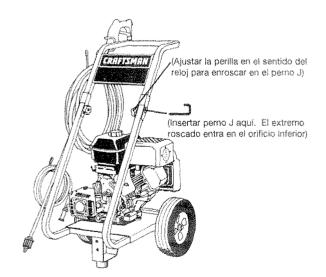


Quitar la plancha de madera del bastidor de la unidad.
 Se necesita usar una llave regulable para tuercas.
 Desechar la tuerca, el perno y la tabla.

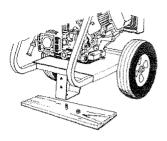

3. Instalar el tope amortiguador de caucho en el bastidor colocando la arandela en el extremo roscado del perno. Luego, con la arandela montada, insertar el extremo roscado del perno en el orificio del tope amortiguador de caucho. Colocar la parte roscada del tope amortiguador en el mismoorificio donde estuvo montada la tabla en la lavadora a presión. Luego colocar la arandela de presión en la parte roscada del perno que ha\atravesado el orificio de montaje en la lavadora a presión, y para sujetar el tapón al bastidor colocarle la tuerca al perno y ajustarla. Todas las piezas del tope amortiguador se suministran en la bolsa de piezas.

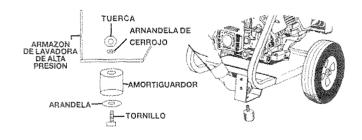

 Conectar el tubo aplicador con la extensión de la boquilla en la pistola. Para ajustar, girar la perilla en el sentido del reloj. Ajustar a mano.



 Cortar el amarre de la manguera para alta presión.
 Desenrollar la manguera y conectar el extremo roscado a la pistola.


NOTA: No sacar la cinta selladora de Teflón que está en la rosca.



6. Conectar la manguera para químicos al niple del inyector de químicos en la bomba.



7. Conectar la manguera para alta presión al acople de conexión rápida en la salida de la presión en la lavadora.

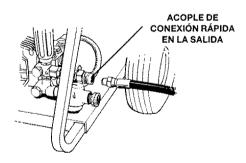


**NOTA:** Siempre mantener la manguera alejada del tubo de escape del motor.

8. Esta unidad ha sido despachada de fábrica con un tapón temporal en la bomba que debe reemplazarse con una tapa respiradora. Este tapón está ubicado en la toma de aceite de la bomba. Desenroscar el tapón para sacarlo. Sacar la tapa respiradora de la bolsa adherida al tapón e instalarla en la toma de aceite de la bomba.



9. Colocar la pistola ensamblada con el tubo aplicador en el soporte de la lavadora a presión.

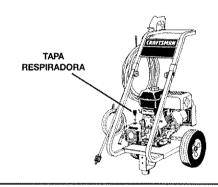

▲ CUIDADO: Omitir reemplazar el tapón por la tapa respiradora puede causar daños serios a la bomba.

#### Lista de Comprobación

Antes de continuar, por favor comprobar lo siguiente:

- Haber seguido las instrucciones de ensamblaje completamente.
- Haber revisado dos veces que todos los acoples estén firmemente ajustados.

**IMPORTANTE:** Antes de cualquier intento de arrancar la lavadora a presión, cerciorarse de inspeccionar el aceite del motor (referirse a la sección Aceite del Motor en el capítulo Operación. Ver la página 9).

## OPERACIÓN

#### Familiarizarse con la Lavadora de Presión

Leer el Manual del Operador y las Pautas de Seguridad antes de operar la Lavadora de Alta Presión. Comparar esta ilustración con nuestra lavadora de presión para familiarizarse con los diversos controles y dispositivos de regulación. Conservar este manual para referencia futura.

BOMBA: Desarrolla alta presión.

**TOMA DE ACEITE DEL MOTOR:** Lugar por donde se echa aceite al motor.

**REGULADOR DE PRESIÓN:** Permite regular la presión del chorro de salida.

INTERRUPTOR PARA ARRANCAR Y APAGAR: Coloca la unidad en la modalidad para arrancar con la cuerda de arranque y para *Apagar* el motor cuando está funcionando. **CUERDA DEL ARRANCADOR:** Se usa para arrancar el motor manualmente.

PISTOLA APLICADORA: Tiene un gatillo que permite controlar el agua que se aplica a la superficie que se desea lavar.


**TOMA DE ACEITE DE LA BOMBA:** Lugar por donde se echa aceite a la bomba.

**TAPA DEL TANQUE DE GASOLINA**: La tapa se saca para rellenar con gasolina sin plomo.

TUBO INYECTOR DE QUÍMICOS Y FILTRO: Mezcla el agua y el detergente en el punto de alimentación del agua.

**SALIDA DE ALTA PRESIÓN:** Conexión para la manguera de alta presión.

CEBADO: Palanquita de cebado para arrancar la unidad.

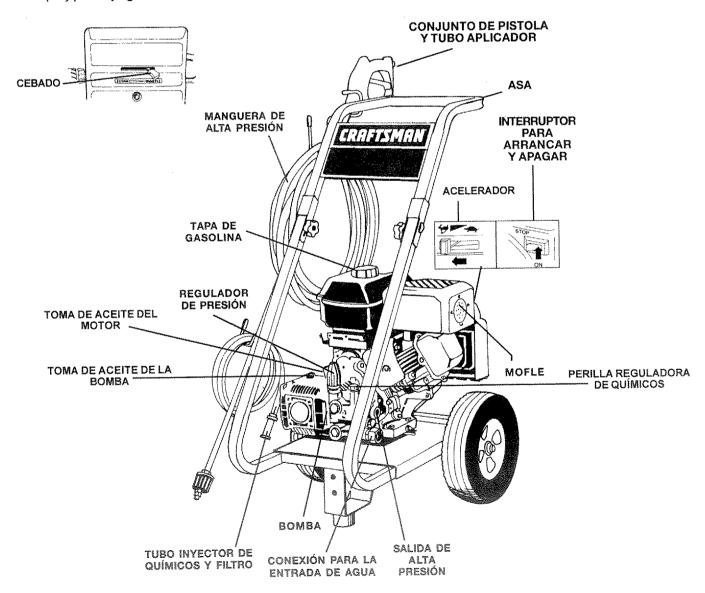


Advertencia: Leer el Manual del Operador. No intentar operar este equipo hasta haber leído las instrucciones de Seguridad, Operación y Mantenimiento.

Nota: En la caja de la lavadora se incluye una cinta de vídeo que muestra como operar la lavadora de presión. Si se dispone de una grabadora de vídeo se recomienda ver esta cinta antes de operar la unidad.

Advertencia: Nunca regular la forma del abanico del chorro mientras se esté rociando. Nunca colocar las manos delante de la boquilla del chorro para modificar la forma del chorro porque puede lesionarse.


#### Apagado de la Lavadora de Presión

- ▲ CUIDADO: No operar la bomba a menos que la manguera de abastecimiento de agua esté conectada a una llave de agua que esté abierta, de lo contrario de dañará la bomba.
- Para apagar la lavadora a presión, colocar el interruptor en la posición de "OFF" (Apagado).



 La presión de agua del sistema no se aliviará con sólo apagar el motor. Presionar el gatillo de la pistola por unos 3 segundos para descargar la presión. La longitud del chorro disminuirá.

IMPORTANTE: Esta unidad está equipada con una válvula térmica de alivio. Si se deja funcionar la unidad por varios minutos sin presionar el gatillo de la pistola puede ser que varias gotas de agua salgan por esta válvula para enfriar la unidad. El agua fluirá del fondo de la bomba.



#### Antes de Arrancar el Motor

Hacer lo siguiente para hacer que el motor funcione:

▲ CUIDADO: Siempre verificar el nivel del aceite del motor antes de cada arranque. Hacer que el motor funcione sin aceite o con el nivel bajo puede causar daños serios al motor. ▲ CUIDADO: Siempre verificar el nivel del aceite de la bomba antes de cada arranque. Hacer que la bomba funcione con poco aceite puede causar daños serios a la bomba.


#### Agregar Aceite a la Bomba

Antes de hacer funcionar la lavadora a presión, inspeccionar el nivel del aceite de la bomba por la mirilla de vidrio en el costado de la bomba. Cuando la bomba está debidamente llena, el nivel del aceite estará en el medio entre los dos triángulos. La unidad ha sido despachada de fábrica con aceite en la bomba. Agregar aceite solo si el nivel ha caído del punto medio de la mirilla. **NO sobrellenar.** Usar aceite no detergente de grado 30.


▲ CUIDADO: No usar el aceite para motor provisto con la unidad. El aceite para motor que se ha provisto contiene detergentes y la bomba requiere aceite sin detergentes. El aceite con detergentes puede daar la bomba.

#### Aceite del Motor

La unidad ha sido despachada sin aceite en el motor, pero se incluye una botella de aceite SAE 30 en la caja de embalaje. Sacar el tapón de aceite ubicado al costado del motor. Usando un embudo llenar de aceite del cárter hasta la última vuelta de la rosca en la toma de aceite. Rellenar el aceitelentamente.



**NOTA**: Cuando se agregue aceite al cárter, usar aceite detergente de alta calidad clasificado "Para servicio SF, SG, SH, de grado SAE 30". No usar aditivos especiales. Seleccionar el grado de viscosidad del aceite de acuerdo con las temperaturas de operación que se esperen tener.



Los motores enfriados por aire funcionan más calientes que los motores de los automóviles. El uso de aceites de viscosidad múltiple tal como (10W-30, etc.) en temperaturas ambientales superiores a 4°C/40°F, harán que el consumo de aceite aumente por encima de lo normal. Si se usa aceite de viscosidad múltiple, revisar el nivel del aceite con más frecuencia para evitar la posibilidad de daños al motor por operar con poca lubricación. El uso de aceite SAE 30 en temperaturas inferiores a 4°C/40°F dificultará el arranque y posiblemente cause daños al motor debido a lubricación inadecuada.

#### Gasolina

El motor de la lavadora de presión es de 4 tiempos. Usar únicamente gasolina sin plomo.

▲ CUIDADO: No rellenar el tanque de gasolina demasiado. Siempre dejar espacio para la expansión del combustible.

▲ ADVERTENCIA: Nunca rellenar el tanque en interiores. Nunca rellenar el tanque de combustible cuando el motor esté funcionando ni cuando esté caliente. No fumar ni tener llamas cerca cuando se rellene combustible.

Usar gasolina regular sin plomo que esté fresca y limpia de mínimo 85 octanos. No mezclar el aceite con la gasolina. Si no se dispone de gasolina sin plomo, se puede usar gasolina con plomo.

IMPORTANTE: Durante el almacenaje, es importante evitar la formación de sedimentos pegajosos en el sistema de combustión tales como en el carburador, manguera del filtro de combustible o tanque. La experiencia también nos indica que las gasolinas mezcladas con alcohol (llamadas gasohol o que tienen etanol o metanol) pueden atraer humedad que luego se separará y formará ácidos durante el almacenaje de la unidad. La gasolina acídica puede dañar el motor mientras esté almacenado. Para evitarle problemas al motor, vaciar el sistema de combustión antes de almacenar la unidad por 30 días o más. Nunca echar productos limpiadores para el motor o el carburador en el tanque de combustible porque se pueden causar daños permanentes.

**NOTA**: Nunca arrancar la lavadora a presión a menos que esté conectada a un suministro de agua y que la llave esté abierta.

Cerciorarse que la válvula de control de combustible esté abierta.



- Sacar la tapa del tanque de gasolina.
- · Agregar lentamente gasolina sin plomo en el tanque.
- No sobrellenar.




 Conectar una manguera de jardín a la boquilla de la toma de agua en la lavadora a presión. Ajustarla girando la boquilla de la toma de agua contra el sentido del reloj.




- Conectar la manguera para alta presión a la descarga de la bomba.
- Conectar la manguera de agua a la llave de suministro de agua y abrirla.




- Apretar el gatillo de la pistola aplicadora para descargar la presión de aire acumulada al haber abierto la llave del suministro de agua. La pistola disparará un pequeño chorro de agua. Esto facilitará el arranque del motor.
- Enganchar el seguro de la pistola aplicadora. Esto fijará el gatillo en posición y evitará que se aplique un chorro de alta presión en forma accidental.



 El motor tiene una palanquita para CHOKE/RUN (Cebado/Operación). Colocar la palanquita en la posición de "Choke" (Cebado).



 El motor tiene otra palanquita para control de aceleración, colocarla en la posición de la liebre. Siempre echar el motor a funcionar con la palanquita en la posición de la liebre Colocar el interruptor de "ON/STOP" (Activado/ Desactivado) en la posición de "ON" (Activado).



- Cerciorarse que la válvula para el control del combustible esté abierta.
- Tomar la manija de la cuerda del arrancador y tirar de ella lentamente hasta sentir una resistencia, luego tirar de ella firmemente para que el motor arranque.
- Cuando el motor arranque, mover la palanquita del "CHOKE" (Cebado) gradualmente a la posición de "RUN" (Operación).
- Si el motor no arranca después de tirar de la cuerda del arrancador 5 veces, regresar la palanca de "CHOKE" (Cebado) a la posición RUN (Operación).
- Para volver a arrancar el motor cuando esté caliente, cerciorarse que la palanquita de aceleración esté en la posición de "RUN" (Operación). Cerciorarse que la válvula para el control del combustible esté abierta y que el acelerador esté en la posición de la liebre.

**NOTA**: Si se presentasen fugas, apagar la unidad y ajustar las conexiones.

#### Como usar la Lavadora de Presión

En el extremo de la pistola aplicadora hay una boquilla que se puede girar a ambos lados. Con la boquilla regulable se controla la presión del chorro para alta o baja presión.

 Girar la boquilla contra el sentido del reloj para la presión baja y en el sentido del reloj para la presión alta.



Para un lavado más efectivo, mantener la boquilla de rociado a una distancia de entre 20cm (8") y 60cm (24") de la superficie que se está lavando.

**IMPORTANTE**: Si se afloja la boquilla concentrando el chorro demasiado, especialmente en alta presión, se puede dañar la superficie que se está lavando.

 La perilla de control de la presión está ubicada en la bomba. Se puede aumentar la presión girando la perilla en el sentido del reloj o disminuirla girando la perilla contra el sentido del reloj.



**NOTA:** La presión máxima de esta unidad viene regulada de fábrica. No intentar aumentar la presión que se regula en fábrica.

#### Uso de Detergentes y Químicos

**IMPORTANTE**: Usar detergentes y productos químicos que estén diseñados específicamente para usar en lavadoras a presión. Para aplicar detergente seguir estos pasos:


- Preparar el detergente o químico requerido para la tarea.
- Insertar el tubo succionador en el contenedor (no se incluye el detergente).

**NOTA**: El primer paso es la preparación de la solución adecuada de detergente o químico apropiado para que penetre en la suciedad y la suelte. **Aplicar el detergente o químico a baja presión** para evitar que salpique y se desperdicie. Dejar que la solución repose sobre la superficie unos 3 a 5 minutos para que actúe.

**NOTA**: El segundo paso consiste en usar la lavadora a presión para lavar la superficie que se ha preparado y luego enjuagarla.

- Girar la boquilla regulable contra el sentido del reloj para la modalidad de presión baja. No se puede aplicar detergente/químicos con la boquilla en la posición para presión alta.
- Revisar la posición de la boquilla regulable.
- Conectar una manguera de jardín a la entrada de agua (ver la sección "Arranque de la Lavadora a Presión" en la página 9), verificar que la manguera para alta presión esté conectada a la pistola aplicadora y a la bomba (ver la sección "Ensamblaje") y arrancar el motor.
- Aplicar el detergente/químico a la superficie seca comenzando de abajo y trabajando hacia arriba.
- Permitir que el detergente/químico repose de 3 a 5 minutos en la superficie antes de lavar y enjuagar.

- Para lavar, comenzar por la parte inferior de la superficie y avanzar hacia arriba aplicando en tramos largos traslapados y uniformes.
- La lavadora a presión está equipada con una perilla para regular la inyección del químico. Con la perilla totalmente abierta se obtendrá le máximo de succió de químico. Con la perilla totalmente cerrada no habrá succión de químico. Girar la perilla contra el sentido del reloj para lograr una mayor succón del detergente/ químico y en el sentido del reloj para una menor succón.



 Se recomienda que después de usar la lavadora de presión se lave internamente la bomba, el inyector de químicos y la manguera de químicos con agua limpia. Para ello simplemente sumergir la manguera de químicos en agua y sifonear agua por 1 a 2 minutos

MANTENIMIENTO RESPONSABILIDADES DEL PROPIETARIO						
TAREA DE MANTENIMIENTO	Antes de Cada Uso	Cada 25 Horas o Cada Año	Cada 50 Horas o Cada Año	Cada 100 Horas o Cada Año		
LAVADORA A PRESIÓN						
Inspeccionar/limpiar la malla de entrada.	Χ					
Inspeccionar la manguera para alta presión.	X					
Inspeccionar las mangueras de succión de						
detergente/químico y filtro.	X					
Inspeccionar para detectar fugas por la pistola/tubo aplicador	Χ					
Purgar el aire y los contaminantes de la bomba	X					
Inspeccionar el aceite de la bomba	Χ					
Cambiar el aceite de la bomba			X			
MOTOR				WENGEL		
Inspeccionar el nivel de aceite.	X					
Cambiar el aceite del motor.			X			

#### Especificaciones del Equipo

#### Especificaciones de la Lavadora de Presión

Presión	2700
Índice de Flujo	3 GPM
Unidades de Limpieza (PSI x GPM)	8100

#### Especificaciones del Motor

RPM	3600
Potencia	7.5 HP
Luz de la Bujía	0.76mm (0.030")
Capacidad de Gasolina	4.4 Lt. (4.6 Qts)
Aceite	SAE grado 30

#### Recomendaciones Generales

La garantía de la lavadora a alta presión no cubre las píezas que han sido sujetas a mal uso o negligencia por parte del operador. Para mantener la validez de la garantía, el operador deberá hacerle el mantenimiento a la lavadora de alta presión como se indica en este manual.

Algunas regulaciones/ajustes periódicos serán necesarias para el mantenimiento de la lavadora a alta presión.

Todas las regulaciones/ajustes en la Sección de Mantenimiento de este manual deberán llevarse a cabo por lo menos una vez por temporada.

Una vez al año se deberán limpiar o reemplazar la bujía y el filtro de aire y se deberán inspeccionar la pistola y el tubo aplicador para detectar puntos de desgaste. Una bujía y un filtro de aire limpios asegurarán una buena mezcla de aire y combustible y ayudarán a que el motor opere mejor y dure más.

NOTA: Con el transcurso del tiempo, los anillos "O" de la pistola rociadora se gastarán. Con la unidad se provee un juego de anillos "O" de repuesto que viene adherido al manual del operador.

#### Mantenimiento de la Lavadora de Presión

Inspeccionar y Cambiar la Malla de Entrada: Examinar la malla en el acople de entrada de la bomba. Limpiar si estuviese atorada, reemplazar si estuviese rota.

Inspeccionar la Manguera de Alta Presión: La manguera de alta presión puede desarrollar fugas debido al desgaste, estrangulamiento o maltrato. Inspeccionar la manguera antes de cada uso para detectar cortes, fugas, abrasiones, protuberancias en el forro, daños o juego de los acoples. Si existiese alguna de estas condiciones, reemplazar la manguera de inmediato.

Inspeccionar la Manguera de Suministro de Químico/ Detergente: Examinar la manguera de químico/detergente y limpiarla si estuviese obstruida. La manguera debe quedar bien ajustada en el acople de la bomba. Inspeccionar para detectar fugas o roturas. Reemplazar el filtro o la manguera si alguno de ellos estuviese dañado.

Inspeccionar la Pistola/Tubo Aplicador: Examinar las conexiones de la manguera a la pistola para cerciorarse que estén bien asegurados. Probar el gatillo presionándolo para asegurarse que regrese a su posición cuando se suelte.

#### Aceite de la Bomba

El nivel del aceite de la bomba debe inspeccionare antes de cada uso.

#### Cambio de Aceite de la Bomba

El aceite debe cambiarse después de las primeras 10 horas de operación. Posteriormente debe cambiarse cada 50 horas de operación. Para drenar el aceite, simplemente sacar el tapón de drenaje del aceite con una llave ajustable para tuercas. El tapón del aceite está en la parte inferior de la bomba. Desechar el aceite usado apropiadamente. Sacar la tapa de la toma de aceite y echar aceite grado 30 no detergente. Llenar hasta que el nivel llegue al punto medio en la mirilla de vidrio.

# Purgar el Aire y los Contaminantes de la Bomba

Seguir estos pasos para eliminar el aire de la bomba:

- Preparar la lavadora de presión como se describe en la Sección de Ensamblaje y conectar el suministro de aqua.
- Retirar la extensión del tubo aplicador de la pistola aplicadora.
- Tirar del gatillo en la pistola y mantenerlo presionado.

Seguir estos pasos para eliminar los contaminantes de la bomba:

 Preparar la lavadora de presión como se describe en la sección de ENSAMBLAJE, conectar el suministro de agua.

- Retirar la extensión del tubo aplicador de la pistola aplicadora.
- Arrancar el motor de acuerdo a las instrucciones en la sección de OPERACIÓN.
- Tirar del gatillo en la pistola y mantenerlo presionado.
- Soltar el gatillo y volver a instalar la extensión del tubo aplicador cuando el suministro de agua esté constante y parejo.

#### Mantenimiento del Motor

#### Aceite

 El nível del aceite deberá inspeccionarse antes de cada uso de la lavadora o por lo menos cada 5 horas de operación. Referirse a la sección "Aceite del Motor" en la página 9.


#### Cambio de Aceite del Motor

En motores nuevos cambiar el aceite después de las primeras 5 horas de operación. Posteriormente debe cambiarse cada 50 horas de operación.

Cambiar el aceite cuando el motor todavía esté caliente. El aceite fluirá con mayor facilidad y arrastrará más impurezas consigo. Cerciorarse que el motor esté nivelado al llenar, medir o cambiar el aceite.


#### Cambiar el aceite de la siguiente forma:

- Antes de sacar el tapón de drenaje y la tapa de la toma de aceite, limpiar la suciedad, pasto y todo cuerpo extraño de alrededor.
- Sacar el tapón de drenaje y la tapa de la toma de aceite. Inclinarel motor hacia el lado del drenaje para obtener un mejor drenaje. Cerciorarse de permitir tiempo suficiente para lograr un drenaje completo.

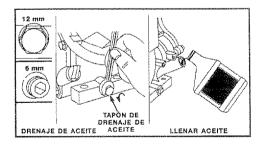

- Volver a instalar el tapón de drenaje y cerciorarse que quede bien ajustado.
- Usando un embudo llenar de aceite del cáiter nasta la últmia vuelta de la rosca en la toma de aceite. Rellenarel aceitelentamente.

 Volver a instalar la tapa con varilla medidora en la toma de aceite.



#### Mantenimiento del Filtro de Aire

Para limpiar el prefiltro, lavarlo en una solución de detergente con agua. Permitir que seque completamente antes de volverlo a usar. No aceitar el prefiltro. Reemplazarlo si estuviese muy sucio o dañado.

**NOTA**: No usar solventes de petróleo como por ejemplo kerosene porque el cartucho se puede dañar. No usar aire presurizado para limpiar el cartucho. El aire presurizado puede dañar el cartucho.


#### Para limpiar el filtro de aire seguir estos pasos:

- Desenroscar los pernos que sujetan la cubierta. Sacar la cubierta y el conjunto de filtros.
- 2. Sacar el cartucho de la cubierta, luego el reten (si lo tuviese) y el prefiltro.

Para limpiar el cartucho, golpearlo levemente sobre una superficie plana. No aceitar el cartucho. Reemplazarlo si estuviese muy sucio o dañado.


**NOTA**: No usar solventes de petróleo como por ejemplo kerosene porque el cartucho se puede dañar. No usar aire presurizado para limpiar el cartucho. El aire presurizado puede dañar el cartucho.

- Volver a ensamblar el prefiltro y el retén (si lo tuviese).
   Colocarlos dentro de la cubierta con el lado de la malla hacia el cartucho. Colocar el cartucho en el retén en la cubierta.
- 4. Instalar la cubierta y el conjunto de filtros bien alineados sobre la base (si estuviese equipado con pestañas, éstas deben encajar en las ranuras) y sujetarlo firmemente. Ajustar los pernos de la cubierta en forma segura.

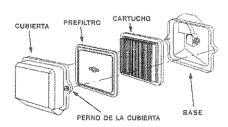


¡Mantener limpias las piezas y el motor!

 No limpiar el motor con un chorro de agua fuerte porque el agua podría contaminar el sistema de combustible.
 Después de cada uso, con una brocha o cepillo limpiar el protector con aberturas de ventilación para evitar que el motor se dañe por sobrecalentamiento.



 Antes de operar el motor, limpiar el área del mofle para eliminar el pasto y los residuos que puedan ser combustibles.



#### Limpiar y Reemplazar la Bujía

Reemplazar la bujía cada 100 horas de operación o una vez cada año, lo que ocurra primero. Esto ayudará a que el motor arranque con facilidad y opere mejor.



## **MANTENIMIENTO Y REGULACIONES**

#### Carburador

El carburador de la lavadora de alta presión está regulado de fábrica. El carburador no deberá alterarse. Si la lavadora de presión se usa a una altitud superior a 1,500 metros (5,000'), consultar con el Centro de Servicio de Sears más cercano para obtener las regulaciones necesarias para la altitud.

- ▲ CUIDADO: La velocidad del motor se fijó en la fábrica a un punto apropiado y no debe requerir regulaciones adicionales. No intentar alterar la velocidad del motor. En caso que se sospeche que el motor está operando muy lento o muy ràpido, llevar la lavadora de presión a un Centro de Servicio Autorizado de Sears para que lo reparen o regulen.
- ADVERTENCIA: Las velocidades elevadas de operación son peligrosas y aumentan el riesgo de daños personales o al equipo.
- ▲ CUIDADO: Las bajas velocidades del motor imponen una carga pesada al motor, y cuando el motor no provee la potencia necesaria, la vida útil del motor podría acortarse.

#### Limpieza de la Boquilla Tubo Aplicador de Alta y Baja presión:

Si la boquilla se obstruyese, la unidad podría elevar la presión demasiado y restringir el flujo causando una sobrepresión en la lavadora. Si esto sucediese:

- 1. Colocar el interruptor del motor en la posición de "OFF" (Apagado) y desconectar el cable de la bujía.
- 2. Cerrar el suministro de agua.
- 3. Tirar del gatillo de la pistola aplicadora para aliviar la presión; desconectar el tubo aplicador de la pistola.
- 4. Limpiar la boquilla usando un clip para papeles enderezado. Introducir el alambre en un extremo de la boquilla y moverlo hacia adelante y hacia atrás hasta eliminar la obstrucción.
- 5. Eliminar los residuos adicionales pasando agua al reverso por el tubo durante unos 30 a 60 segundos.
- 6. Volver a ensamblar la pistola y el tubo aplicador.
- 7. Volver a abrir el suministro de agua.
- Colocar el interruptor del motor en la posición de "ON" (Activado) y volver a arrancar la lavadora. Referirse a las instrucciones para hacer funcionar la lavadora.
- Si la boquilla aun sigue obstruía, repetir todos estos pasos.

## <u>ALMACENAMIENTO</u>

Esta lavadora de presión debe almacenarse de tal forma que esté protegida de la congelación. No almacenar la unidad en el exterior ni en un área donde la temperatura caiga por debajo de O°C (32°F). Esto puede causar daños extensos a la unidad.

Si la unidad tiene que almacenarse en lugares de temperaturas congelantes, se deberá usar un anticongelante no tóxico R.V. para protegerla de la congelación.

#### Preparación de la Unidad para su Almacenamiento

**NOTA:** Si no se tiene planeado usar la lavadora de presión por 30 días o más, debe preparase la unidad para su almacenamiento.

#### Preparación del Motor

- Primero agregarle estabilizador de combustible al tanque de gasolina.
- Hacer funcionar la lavadora por 5 minutos completos para permitir que el estabilizador de combustible entre a todo el sistema de combustión.

NOTA: Mientras se lleve a cabo este procedimiento, cerciorarse que la bomba tenga su suministro de agua y que el agua salga de la unidad. NUNCA permitir que la unidad funcione sin que corra agua por la bomba.

- A continuación, apagar el motor y desconectar el suministro de agua.
- Desconectar el cable de la bujía y sacar la bujía.
- Echar una cucharadita de aceite en el orificio de la bujía.
- Taponar el orificio con un paño y tirar de la manija de la cuerda del arrancador varias veces para lubricar la cámara de combustión.
- Volver a colocar la bujía, pero no conectar el cable de la bujía.

#### Preparación de la Bomba


- Cerciorarse de poner el interruptor en la posición de "OFF" (apagado) y que el cable de la bujía esté desconectado.
- Apretar el gatillo de la pistola para aliviar la presión de la manguera de presión. Desconectar la manguera de alta presión y la manguera de jardín de la unidad.
- Tirar de la manija del arrancador 4 a 6 veces para descargar el agua remanente en la bomba.
- Inclinar la unidad con el orificio de entrada de agua apuntando hacia arriba.
- Echar aproximadamente 1/4 de taza de anticongelante no tóxico R.V. por el orificio donde se conecta la manguera de agua a la bomba.
- Poner la máquina al derecho y tirar de la manija del arrancador de 4 a 6 veces para hacer circular el anticongelante dentro de la bomba hasta que expulse un poco.

# **GUÍA PARA DIAGNÓSTICO DE PROBLEMAS**

SÍNTOMA	CAUSA	SOLUCIÓN	
El motor no arranca	<ol> <li>La palanquita de aceleración del motor está en la posición "OFF" (APAGADO).</li> <li>La válvula de "Choke" (cebado) no está en la posición de "Choke".</li> <li>Acumulación de presión después del uso inicial.</li> </ol>	Deslizar la palanquita de aceleración a la posición de "RUN" (OPERACIÓN).     Deslizar la palanquita a la posición de "Choke".     Presionar el gatillo de la pistola.	
No absorbe químico	<ol> <li>La boquilla de la pistola no está en la posición de absorber.</li> <li>La malla de succión de químicos está obstruida.</li> <li>La succión de químicos no está trabajando.</li> <li>El orificio del inyector de químicos está obstruido.</li> </ol>	<ol> <li>Colocar la boquilla en la posición para baja presión.</li> <li>Inspeccionar la malla de químicos, limpiar si estuviese obstruida.</li> <li>Cerciorarse que el extremo del tubo de succión de químicos esté sumergido.</li> <li>Inspeccionar y limpiar.</li> </ol>	
La bomba funciona normalmente pero la presión no alcanza los niveles especificados.	<ol> <li>Suministro de agua restringido.</li> <li>Boquilla en la posición de baja presión.</li> <li>Boquilla incorrecta o gastada.</li> <li>La bomba absorbe aire.</li> <li>Boquilla obstruída.</li> </ol>	<ol> <li>Verificar el suministro de agua y la malla del filtro para detectar cualquier bloqueo. Inspeccionar las mangueras para detectar si hay bloqueos, estrangulaciones, fugas, etc.</li> <li>Girar la perilla en el sentido del reloj para lograr la presión alta.</li> <li>Revisar y reemplazar.</li> <li>Cerciorarse que las mangueras y acoples no tengan fugas de aire.</li> <li>Límpiar la boquilla.</li> </ol>	
Presión Fluctuante	<ol> <li>La bomba absorbe aire.</li> <li>La malla de la entrada de la manguera del jardín está obstruída.</li> <li>Sellos o empaques gastados.</li> <li>Suministro de agua inadecuado.</li> <li>Válvulas de entrada o descarga sucias o gastadas.</li> <li>Fugas en la manguera de descarga.</li> </ol>	<ol> <li>Verificar que las mangueras y acoples no tengan fugas de aire. Purgar el aire de la manguera de jardín.</li> <li>Limpiar. Inspeccionar el filtro con frecuencia.</li> <li>Inspeccionar y reemplazar.</li> <li>Inspeccionar la manguera para ver que no esté estrangulada o acodada</li> <li>Verificar que el flujo de suministro a la bomba sea el adecuado. Asegurarse que la temperatura no exceda (63°C/145°F).</li> <li>Limpiar las válvulas de entrada y descarga. Reemplazar si fuese necesario.</li> </ol>	
La presión cae después de un periodo normal de uso	Boquilla atorada, o parcialmente obstruida.     Boquilla gastada.     Válvulas de la bomba están gastadas, sucias o pegadas.     Empaque del pistón de la bomba está gastado.	Usar el juego para limpieza de boquillas para eliminar la obstrucción. (Referirse a la sección Mantenimiento de Boquillas en el capítulo Servicio y Regulaciones)     Limpiar o reemplazar.     Revisar y reemplazar.	
Bomba ruidosa	Agua muy caliente.     Bomba absorbe aire,      Válvulas sucias o gastadas.     Rodamientos gastados.	1. Reducir la temperatura por debajo de 63°C ó 145°F. 2. Verificar que las mangueras y acoples no tengan fugas de aire. 3. Revisar, limpiar o reemplazar. 4. Revisar y reemplazar si fuese necesario.	
Presencia de Agua en el Aceite (Aceite lechoso)	Alta humedad.     Empaque del pistón y sellos de aceites gastados.	Cambiar el aceite.     Revisar y reemplazar los sellos de aceite.	
Agua Goteando de la Bomba	Válvula térmica de alivío funcionando normalmente     Acoples flojos.     Anillos "O" de la guía del pistón o retenes gastados.     Empaque del pistón gastado.	<ol> <li>Está protegiendo la bomba si la lavadora está funcionando por un tiempo largo pero sin usarse, Apagar el motor.</li> <li>Ajustar.</li> <li>Revisar y reemplazar.</li> <li>Revisar y reemplazar.</li> </ol>	
Goteo de Aceite	<ol> <li>Sello de aceite gastado.</li> <li>Tapón de drenaje flojo o anillo "O" del tapón gastado.</li> </ol>	Revisar y reemplazar.     Ajustar el tapón de drenaje o reemplazar el anillo "O".     No sobreajustar.	

### PARTES

CRAFTSMAN 2500 PSI MAQUINA LAVADORA DE ALTA PRESION 919.762500

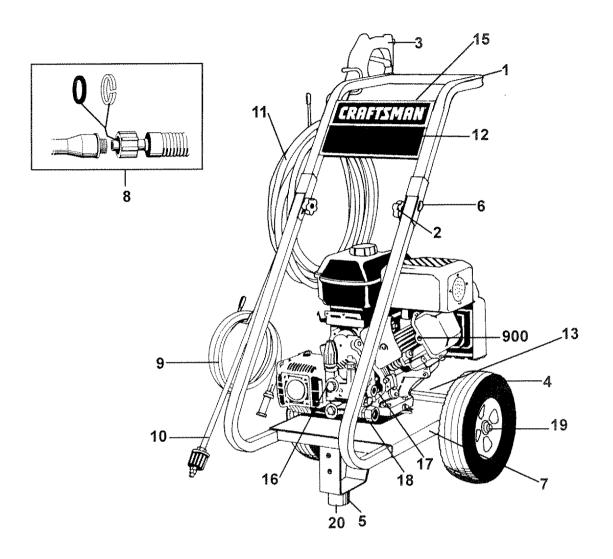


# PARA LISTE DE PARTES VEA LA PAGINA 16 VERSION EN INGLES

### PARTES

## CRAFTSMAN 2500 PSI MAQUINA LAVADORA DE ALTA PRESION 919.762500

**BOMBA PARTES # PK16642** 

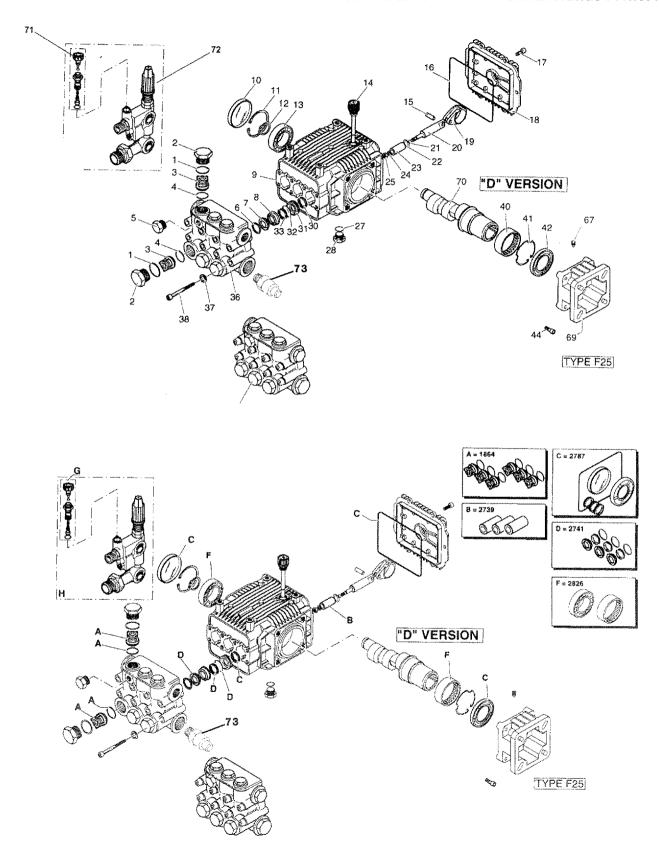

#### PARTES

CRAFTSMAN 2500 PSI MAQUINA LAVADORA DE ALTA PRESION 919.762500

**BOMBA PARTES # PK16642** 

# PARA LISTE DE PARTES VEA LA PAGINA 18 VERSION EN INGLES

MOTOR PARTES # 121432-0112-E1

# PARA LISTE DE PARTES VEA LA PAGINA 19-27 VERSION EN INGLES

## NOTAS

# NOTAS

Para solicitar servicio de reparación o repuestos que usted necesite, llamar de 7 am a 7 pm, los 7 días de la semana al

1-800-366-PART

(1-800-366-7278)



Para servicio de reparación en su domicilio de electrodomésticos de las principales marcas, llamar las 24 horas del día, los 7 días de la semana al

1-800-4-REPAIR

(1-800-473-7247)



Para la ubicación del Centro de Repuestos y Reparación de Sears en su área, llamar las 24 horas del días, los 7 días de la semana al

1-800-488-1222



Para información sobre la compra de un Contrato de Mantenimiento de Sears o para averiguar sobre algún Contrato existente, llamar de 9 am a 5 pm, de Lunes a Sábado al

1-800-827-6655



